Circulating Fluid Temperature Controller Thermo-chiller Environmentally Resistant Type

HRS-R Series





Protection of the electrical unit:

Resistant to dust and water splashing

- **Metal panel**
 - The entire exterior surface is metal.
 - A stainless steel panel can be selected. (Option)
- Large capacity tank (12 L)
 - Increased circulating fluid recovery volume (Option)

- Temperature stability: ±0.1°C
- Ambient temperature: 5 to 45°C
- With heating function
- Environmentally friendly R410A as refrigerant

Model	Cooling capacity (60 Hz)	Temperature stability	Set temperature range	Size [mm]	
HRS018-R	1900 W			W 377 x H 615 x D 500	
HRS030-R	2900 W	±0.1°C	5 to 40°C		
HRS050-R	5000 W			W 377 x H 976 x D 592	


Compatible with power supplies in Europe, Asia, Oceania, and North, Central, and South America Single-phase 200 to 230 VAC (50/60 Hz)






Protection of the electrical unit: IP54

The board and electric parts are located inside the electrical box, where they can be protected from dust particles and water splashing.

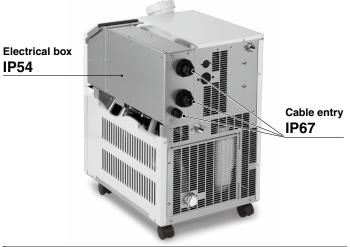


A large capacity tank is available. (Option)

For easier maintenance, the tank capacity for the return circulating fluid from the customer's equipment has been increased. Now, from the high level line on the tank, an extra 5 liters of circulating fluid can be contained.

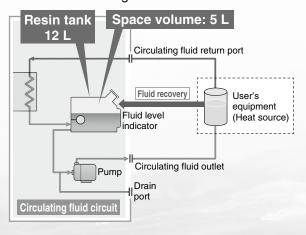

Shaped for easy supply of circulating fluid

The angled supply port facilitates the easy supply of circulating fluid.

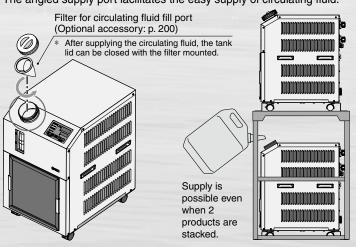

Standard Stainless steel (Option)

Easy cleaning of the tank

There is a separate opening (with a cap) for cleaning the tank behind the circulating fluid fill port.

Opening diameter: ø110



 
Large

tank


capacity


circulating fluid level

High level line



With heating function

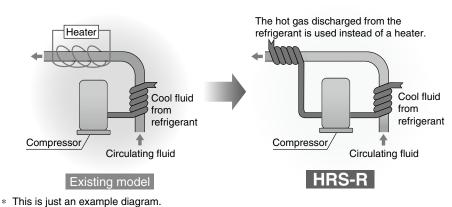

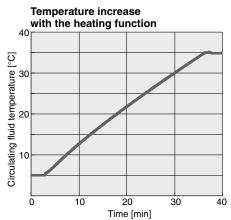

Simple operation



Step

Press the

RUN/
STOP key

Step 2 Adjust the temperature setting with the keys.

Step 3 Press RUN/ key to stop operation.

Easy operation



Large digital display

The large digital display (7-segment and 4 digits) and 2-row display provide a clearer view of the current value (PV) and set value (SV).


Convenient functions (Refer to the Operation Manual for details.)

■ Timer operation function

Timer for ON and OFF can be set in units of 0.5 h up to 99.5 h.

Ex.) Can be set to stop on Saturday and Sunday and restart on Monday morning

Ex. SE.02 "ON timer"

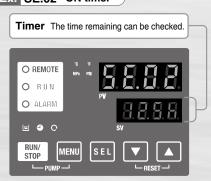

■ Unit conversion function

Temperature and pressure units can be changed.



■ Power failure auto-restart function

Automatic restart after stoppage due to power failure, etc., is possible without pressing the crow key, and remote operation is also possible.

■ Anti-freezing operation function

If the circulating fluid approaches its freezing point, for example, on a cold winter night, the pump operates automatically, and the heat generated by the pump warms the circulating fluid, preventing freezing.

Key-lock function

Can be set in advance to protect the set values from being changed by pressing keys by mistake.

Function to output a signal for completion of preparation

Notifies by communication when the temperature reaches the pre-set temperature range

Independent operation of the pump

The pump can be operated independently while the chiller is powered off. This allows you to check for leakages in piping and to remove the air.



Reduced maintenance hours for the pump

Now with a magnet pump*1


Due to the adoption of a sealless pump, no external leakage of the circulating fluid occurs. Also, periodic checking for pump leakage and replacement of the mechanical seal are not necessary.

*1 For products with the high-pressure pump option and for the HRS050, a mechanical seal pump is used.

Toolless inspection and cleaning of aircooled condenser


Dustproof filter

Easy to remove dust, cutting chips, etc., stuck to the dustproof net with a brush or air blow

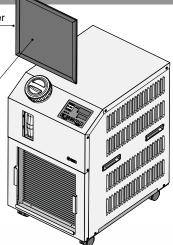

Power supply (24 VDC) available

Power can be supplied from the connector on the rear side of the HRS-R to external switches, etc.

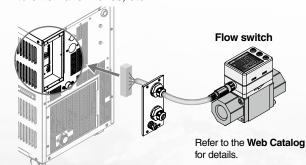

Particle filter set

p. 199



Removes foreign matter in the circulating fluid
Effective in preventing foreign

Effective in preventing foreign matter from entering the user's equipment and chiller

· Prevents pump malfunction

Variations

183

	M odel	Cooling method	Cooling capacity [W] (50/60 Hz)	Single-phase 200 to 230 VAC (50/60 Hz)	Option p. 194	Optional accessories p. 196	International standards
	HRS018-R	Air-cooled refrigeration	1700/1900	•	With earth leakage breaker With automatic fluid fill function Large capacity tank specification High-pressure pump mounted (* The HRS050 cannot be selected.) Stainless steel panel specification SI unit only	Anti-quake bracket Piping conversion fitting Concentration meter Bypass piping set Particle filter set Dustproof filter Separately-installed power transformer Filter for circulating fluid fill port	
	HRS030-R		2500/2900	•			C€
	HRS050-R		4500/5000	•			CA

Self-diagnosis function and check display

Display of 31 types of alarm codes For details, refer to page 192.

Operation is monitored at all times by the integrated sensor.

Should any error occur, the self-diagnosis result is displayed by the applicable alarm code (31 types).

This makes it easier to identify the cause of the alarm. Can be used before requesting service

Changeable alarm set values

Setting item	Set value
Circulating fluid discharge temperature rise	5 to 48°C
Circulating fluid discharge temperature drop	1 to 39°C
Circulating fluid discharge pressure rise	0.05 to 0.75 MPa*1
Circulating fluid discharge pressure drop	0.05 to 0.18 MPa*1

^{*1} Set values vary depending on the model.




Alarm codes can be used for the notification of upcoming recommended maintenance.

The codes notify you when it's time to check the pump and fan motor. Helpful for facility maintenance



Check display

The internal temperature, pressure, and operating time of the product are displayed.

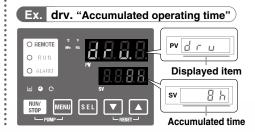


Displayed item Circulating fluid outlet temperature Circulating fluid return temperature Compressor gas temperature Circulating fluid outlet pressure Compressor gas discharge pressure Compressor gas return pressure Accumulated operating time Accumulated operating time of pump Accumulated operating time of fan motor Accumulated operating time of compressor

Communication function

Serial communication (RS232C/RS485) and contact I/Os (2 inputs and 3 outputs) are equipped as standard. This allows for communication with the user's equipment and system construction, depending on the application. A 24 VDC output can be also provided and is available for use with flow switches (SMC's PF3W, etc.).


Ex. 1 Remote signal I/O through serial communication

 Remote operation is enabled (to start and stop operation) through serial communication.




Ex. 3 Alarm and operation status (start, stop, etc.) signal output

 The alarm and status generated in the product are assigned to 3 output signals based on their contents, which can then be output.




Ex. 2 Remote operation signal input

One of the contact inputs is used for remote operation and the other is used to monitor the flow of a flow switch. This is where their alarm outputs are taken in.

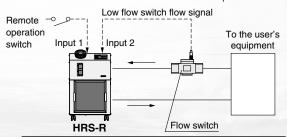

Power for flow switches (24 VDC) can be supplied by the thermo-chiller.

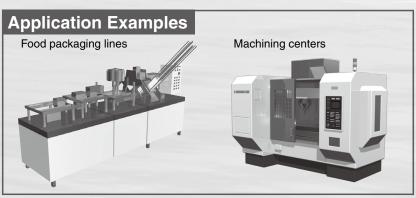



CONTENTS

HRS-R Series Environmentally Resistant Type



Thermo-chiller HRS-R Series

How to Order/Specifications Single-phase 200 to 230 VAC ··· Page 186	Optional Accessories
Cooling Capacity Page 187	① Anti-Quake Bracket ····· Page 196
Heating Capacity ·····Page 188	② Piping Conversion Fitting Page 196
Pump Capacity ·····Page 188	③ Piping Conversion Fitting (For Option) ······ Page 197
Dimensions Page 189	4 Concentration Meter Page 197
Recommended External Piping Flow Page 191	⑤ Bypass Piping Set ····· Page 198
Cable Specifications Page 191	Particle Filter Set Page 199
Operation Display Panel ····· Page 192	⑦ Dustproof Filter ····· Page 200
Alarm ···· Page 192	® Separately-Installed Power Transformer ····· Page 200
Communication Functions ····· Page 193	Filter for Circulating Fluid Fill Port Page 200
Options	Cooling Capacity Calculation
With Earth Leakage Breaker ····· Page 194	Required Cooling Capacity Calculation Page 201
With Automatic Fluid Fill Function Page 194	Precautions on Cooling Capacity Calculation ··· Page 202
Large Capacity Tank Specification ····· Page 194	Circulating Fluid Typical Physical Property Values · · · Page 202
High-Pressure Pump Mounted ·····Page 195	
Stainless Steel Panel Specification Page 195	Specific Product Precautions Page 203
SI Unit Only Page 195	



Thermo-chiller Environmentally Resistant Type C E CA Single-phase 200 to 230 VAC ROHS

HRS-R Series

How to Order



Stainless steel panel specification (Option)

Air-cooled refrigeration HRS 018 - A

Symbol	Cooling capacity
018	1700/1900 W (50/60 Hz)
030	2500/2900 W (50/60 Hz)
050	4500/5000 W (50/60 Hz)

Cooling method •

A | Air-cooled refrigeration

Pipe thread type

Symbol	Type
Nil	Rc
F	G (with Rc-G conversion fitting set)
N	NPT (with Rc-NPT conversion fitting set)

Power supply

20 Single-phase 200 to 230 VAC (50/60 Hz)

Environmentally resistant type

panel specification

(Option)

R Environmentally resistant type

Option

Symbol	Description	Applicable model	
Nil	None		
В	With earth leakage breaker	HRS018/030/050	
J	With automatic fluid fill function	HH3010/030/030	
L	Large capacity tank specification		
Т	High-pressure pump mounted*1	HRS018/030	
V Stainless steel panel specification		HRS018/030/050	
W	SI unit only	HRS016/030/030	

- When multiple options are combined, indicate symbols in alphabetical order.
- *1 The cooling capacity will decrease by about 300 W from the value in the catalog.
 - The pump has a mechanical seal in it and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF003, as a preventive measure.

Specifications * There are different values from standard specifications. Refer to page 194 for details.

		Model		HRS018-A□-20-□-R	HRS030-A□-20-□-R	HRS050-A□-20-□-R	
Cooling method				Air-cooled refrigeration			
Refrigerant				R410A (HFC)			
Re	frige	rant charge	[kg]	0.0	39	0.77	
Co	ntro	method			PID control		
Am		t temperature/Humidity/Altitude	*1 [°C]	Temperature: 5 to	45°C, Humidity: 30 to 70%, Altitude	: less than 3000 m	
		culating fluid*2		Tap wat	er, 15% ethylene glycol aqueous so	olution*4	
	Set	temperature range*1	[°C]		5 to 40		
Ē		oling capacity*3 (50/60 Hz)	[W]	1700/1900	2500/2900	4500/5000	
system	Hea	ating capacity*3 (50/60 Hz)	[W]	430/540	430/540	830/1200	
	Ter	nperature stability*5	[°C]		±0.1		
Circulating fluid	_	Rated flow*6,7 (50/60 Hz)	[L/min]	7 (0.13 MPa)/	7 (0.18 MPa)	23 (0.21 MPa)/28 (0.28 MPa)	
I €	Pump	Maximum flow rate (50/60 Hz)	[L/min]	27/	29	33/40	
ı <u>s</u>	Pu	Maximum pump head (50/60 Hz)	[m]	14/	19	50	
<u> </u>		Output	[W]	20	00	550	
ಕ	Tar	nk capacity	[L]	Approx. 5			
ਹ	Poi	t size		Rc1/2			
	Flu	id contact material		Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC			
Ε	D			Single-phase 200 to 230 VAC (50/60 Hz)			
system	PO	wer supply					
s	Appl	icable earth leakage breaker capacity*8	[A]	11	0	20	
Electrical		ed operating current	[A]	5.1/5.6	5.4/6.1	8.9/11.5	
ect.	Rate	ed power consumption st3 (50/60 Hz)	[kVA]	1.0/1.1	1.1/1.2	1.8/2.3	
Ш	Ele	ctrical box protection level			IP54 (Cable entry: IP67)		
No	ise l	evel ^{*9} (50/60 Hz)	[dB]	62/65		66/69	
Accessories				Fitting (for drain outlet) 1 pc., Input/output signal connector 1 pc., Operation Manual (for installation/operation) 1, Alarm code list sticker 1, Ferrite core (for communication) 1 pc. The power supply cable should be prepared by the user.			
We	ight	*10	[kg]	4		69	

- *1 No condensation should be present.
- *2 If tap water is used, about the water quality SMC recommends, refer to "Specific Product Precautions" for water quality specifications and other usable circulating fluids.
- *3 ① Ambient temperature: 25°C, ② Circulating fluid temperature: 20°C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water Refer to the cooling capacity graph on page 187 for details.
- *4 Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10°C or less.
- *5 Temperature at the thermo-chiller outlet when the circulating fluid flow is at the rated flow and the circulating fluid outlet and return port are directly connected
- The installation environment and power supply are within the specification range and stable.
- *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C
 *7 The required minimum flow rate for maintaining the cooling capacity or temperature stability
 The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)
- *8 Purchase an earth leakage breaker with a sensitivity current of 30 mA separately. (A product with an optional earth leakage breaker (option B) is also available.)
- *9 Front: 1 m, height: 1 m, stable with no load, Other conditions → See *3.
- *10 Weight in the dry state without circulating fluids





HRS-R Series Environmentally Resistant Type


* If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 204) Item 14 "For altitudes of 1000 m or higher."


Cooling Capacity


* For models with a high-pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.

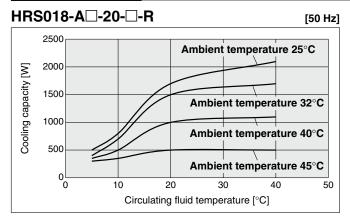


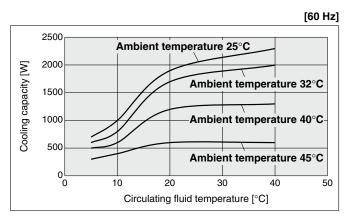

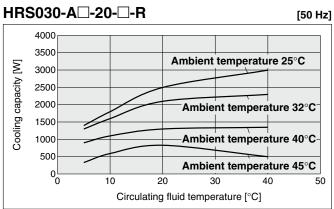


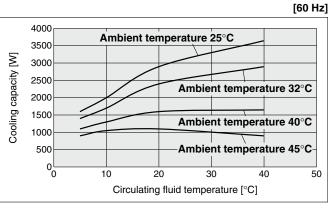


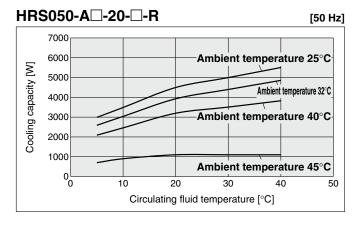


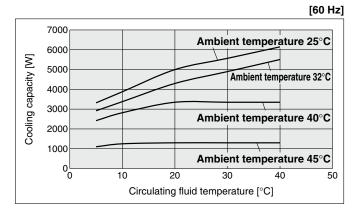


Heating Capacity

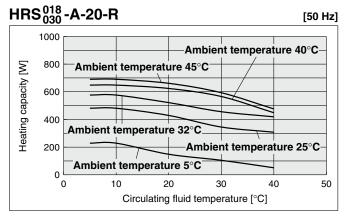

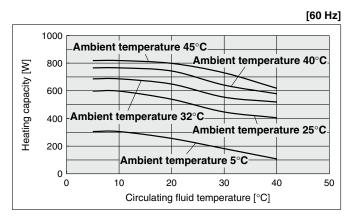


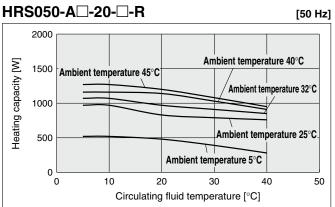

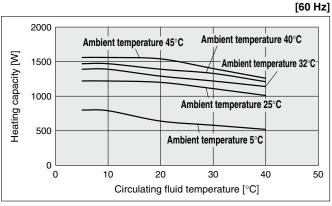


Pump Capacity


HRS₀₃₀ -A-20-R (Single-phase 200 to 230 VAC)

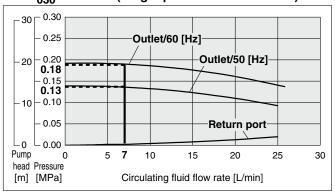




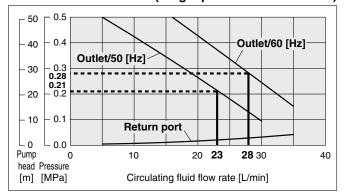


Dimensions

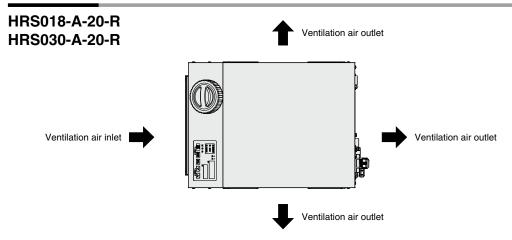


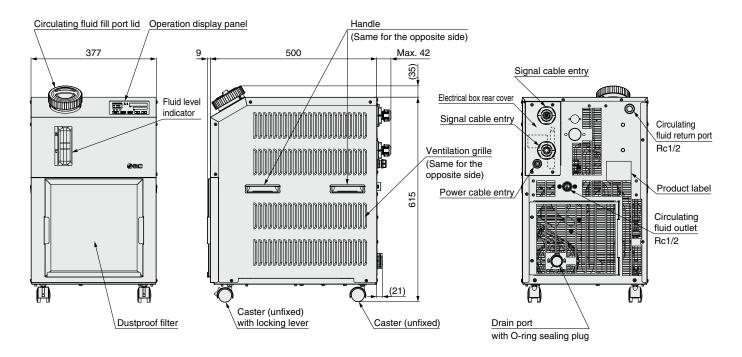

Connection for the power cable and signal cable (The figure does not include the electrical box rear cover.)

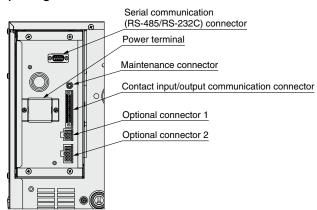


Dimensions

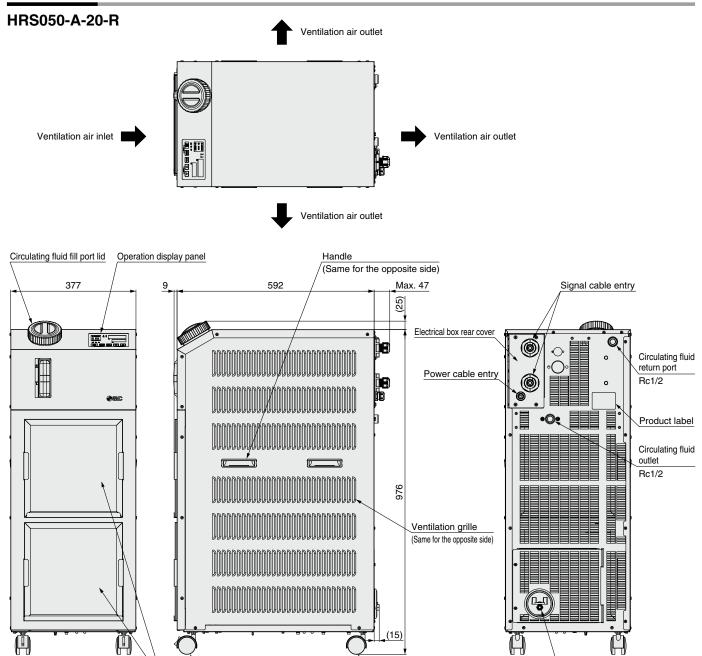

Connection for the power cable and signal cable (The figure does not include the electrical box rear cover.)

Caster (unfixed) with locking lever

Dustproof filter √

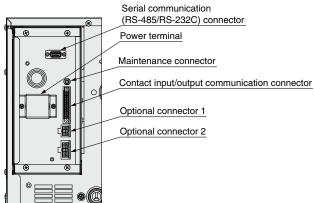




Caster (unfixed)

Drain port Rc1/4 (Valve stopper)

Recommended External Piping Flow

External piping circuit is recommended as shown below.

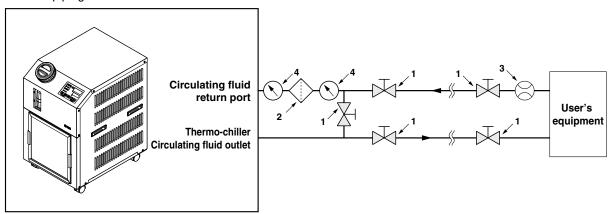

No.	Description	Size	Recommended part no.	Note
1	Valve	Rc1/2	_	_
2	Filter	Filter HRS-PF		If foreign matter with a size of 20 μ m or more are likely to enter, install the particle filter. For the recommended filter, refer to the optional accessory HRS-PF $\square\square$ (page 199).
3	Flow meter	0 to 50 L/min	_	_
4	Pressure gauge	0 to 1.0 MPa	_	_
5	Others (pipe, hose, etc.)	ø15 or more	_	_

Cable Specifications

Power Cable Specifications

	Rated v	alue for thermo-c	Power cable example		
Applicable model	Power supply	Applicable breaker rated current	Terminal screw	Cable size	Recommended crimped terminal
HRS018-A□-20-R HRS030-A□-20-R	Single-phase 200 to 230 VAC (50/60 Hz)	10 A	M3.5	3 cores x 2.0 mm ² (3 cores x AWG14) * Including grounding cable Sheath O.D.: Ø8.5 to Ø11.5	R2-3.5
HRS018-A□-20-B-R HRS030-A□-20-B-R			M5 (Ground terminal: M4)		R2-5 (Ground: R2-4)
HRS018-A□-20-T-R HRS030-A□-20-T-R		15 A	M3.5		R2-3.5
HRS018-A□-20-BT-R HRS030-A□-20-BT-R			M5 (Ground terminal: M4)		R2-5 (Ground: R2-4)
HRS050-A□-20-R		20 A	M3.5		R2-3.5
HRS050-A□-20-B-R			M5 (Ground terminal: M4)		R2-5 (Ground: R2-4)

^{*} Option B features a built-in breaker as shown in the chart above.

Operation Display Panel

The basic operation of this unit is controlled through the operation display panel on the front of the product.



No.	Description		Function		
(1)	Digital display	PV	Displays the circulating fluid current discharge temperature and pressure and alarm codes and other menu items (codes).		
	(7-segment, 4 digits)	sv	Displays the circulating fluid discharge temperature and the set values of other menus.		
2	[°C] [°F] lamp	Equip	ped with a unit conversion function. Displays the unit of display temperature (default setting: °C).		
3	[MPa] [PSI] lamp	Equip	ped with a unit conversion function. Displays the unit of display pressure (default setting: MPa).		
4	[REMOTE] lamp	Enable	es remote operation (start and stop) by communication. Lights up during remote operation.		
5	[RUN] lamp		up when the product is started, and goes off when it is stopped. Flashes during stand-by for stop or eezing function, or independent operation of the pump.		
6	[ALARM] lamp	Flashe	es with buzzer when alarm occurs.		
7	[🖃] lamp	Lights	up when the surface of the fluid level indicator falls below the L level.		
8	[4] lamp	Equip	Equipped with a timer for start and stop. Lights up when this function is operated.		
9	[C] lamp		ped with a power failure auto-restart function, which restarts the product automatically after stopped due ower failure, is provided. Lights up when this function is operated.		
10	[RUN/STOP] key	Makes	s the product start or stop.		
11)	[MENU] key	Shifts the main menu (display screen of circulating fluid discharge temperature and pressure) and other (for monitoring and entry of set values).			
12	[SEL] key	Chang	ges the item in menu and enters the set value.		
13	[▼] key	Decre	ases the set value.		
14)	[▲] key	Increa	Increases the set value.		
15	[PUMP] key	Press th	Press the [MENU] and [RUN/STOP] keys simultaneously. The pump starts running independently to make the product ready for start-up (release the air).		
16	[RESET] key	Press	Press the [▼] and [▲] keys simultaneously. The alarm buzzer is stopped and the [ALARM] indicator is reset.		

Alarm

This unit has 31 types of alarms as standard, and displays each of them by its alarm code on the PV screen with the [ALARM] lamp ([LOW LEVEL] lamp) lit up on the operation display panel. The alarm can be read out through communication.

Alarm code	Alarm message	Operation status
AL01	Low level in tank	Stop*1
AL02	High circulating fluid discharge temperature	Stop
AL03	Circulating fluid discharge temperature rise	Continue*1
AL04	Circulating fluid discharge temperature drop	Continue*1
AL05	High circulating fluid return temperature (60°C)	Stop
AL06	High circulating fluid discharge pressure	Stop
AL07	Abnormal pump operation	Stop
AL08	Circulating fluid discharge pressure rise	Continue*1
AL09	Circulating fluid discharge pressure drop	Continue*1
AL10	High compressor intake temperature	Stop
AL11	Low compressor intake temperature	Stop
AL12	Low super heat temperature	Stop
AL13	High compressor discharge pressure	Stop
AL15	Refrigerating circuit pressure (high pressure side) drop	Stop
AL16	Refrigerating circuit pressure (low pressure side) rise	Stop
AL17	Refrigerating circuit pressure (low pressure side) drop	Stop

Alarm code	Alarm message	Operation status
AL18	Compressor overload	Stop
AL19*2	Communication error*2	Continue*1
AL20	Memory error	Stop
AL21	DC line fuse cut	Stop
AL22	Circulating fluid discharge temperature sensor failure	Stop
AL23	Circulating fluid return temperature sensor failure	Stop
AL24	Compressor intake temperature sensor failure	Stop
AL25	Circulating fluid discharge pressure sensor failure	Stop
AL26	Compressor discharge pressure sensor failure	Stop
AL27	Compressor intake pressure sensor failure	Stop
AL28	Pump maintenance	Continue
AL29	Fan motor maintenance	Continue
AL30	Compressor maintenance	Continue
AL31*2	Contact 1 input signal detection	Stop*1
AL32*2	Contact 2 inputs signal detection	Stop*1

^{*1 &}quot;Stop" or "Continue" are default settings. Users can change them to "Continue" and "Stop". For details, refer to the Operation Manual.

^{*2 &}quot;AL19, AL31, AL32" are disabled in the default setting. If this function is necessary, it should be set by the user, referring to the Operation Manual.



Communication Functions


Contact Input/Output


Item		Specifications			
Connector type (to the product/to the socket (Accessory))		MC 1,5/12-GF-3,5/MC 1,5/12-STF-3,5 (made by PHOENIX CONTACT) Option B: DFK-MC1,5/12-GF-3,81 / MC1,5/12-STF-3,81 (made by PHOENIX CONTACT)			
Insulation method		Photocoupler			
	Rated input voltage	24 VDC			
Input signal	Operating voltage range	21.6 VDC to 26.4 VDC			
	Rated input current	5 mA TYP			
	Input impedance	4.7 kΩ			
Contact cutnut	Rated load voltage	48 VAC or less/30 VDC or less			
Contact output	Maximum load current	500 mA AC/DC (Resistance load)			
signal	Minimum load current	5 VDC 10 mA			
Out	put voltage	24 VDC ±10% 0.5 A MAX			
Circuit diagram		24 VDC output 24 VCOM output 25 VCOM output 26 VCOM output 27 VCOM output 28 VCOM output 29 VCOM output 29 VCOM output 29 VCOM output 20 VCOM output 21 VCOM output 22 VCOM output 24 VCOM output 25 VCOM output 26 VCOM output 27 VCOM output 28 VCOM output 29 VCOM output 29 VCOM output 20 VCOM output 30 VCOM output 40 VCO			

- *1 The pin numbers and output signals can be set by the user. For details, refer to the Operation Manual.
- *2 When using with optional accessories, depending on the accessory, the allowable current of 24 VDC devices will be reduced. Refer to the Operation Manual of the optional accessories for details.

Serial Communication

  The serial communication (RS-485/RS-232C) enables the following items to be written and read out. For details, refer to the Operation Manual for communication.





Item	Specifications		
Connector type	D-sub 9-pin, Female connector (Mounting screw: M2.6 x 0.45)		
Protocol	Modicon Modbus compliant/S	imple communication protocol	
Standards	EIA standard RS-485 EIA standard RS-232C		
Circuit diagram	To the thermo-chiller User's equipment side SD+ SG SD- SD-	To the thermo-chiller User's equipment side	

^{*} The terminal resistance of RS-485 (120 Ω) can be switched by the operation display panel. For details, refer to the Operation Manual. Do not connect other than in the way shown above, as it can result in failure.



HRS-R Series Options

 Options have to be selected when ordering the thermo-chiller.
 It is not possible to add them after purchasing the unit.

B

Option symbol


With Earth Leakage Breaker


HRS _____-A-20-<u>B</u>-R


With earth leakage breaker

In the event of a short circuit, overcurrent or overheating, the earth leakage breaker will automatically shut off the power supply.

Model	Rated current [A]	Sensitivity of leak current [mA]
HRS018-A□-20-B□-R HRS030-A□-20-B□-R	10	30
HRS0□□-A□-20-B□T□-R (Option T [High-pressure pump mounted])	15	30
HRS050-A□-B□-R	20	30

 

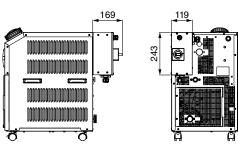

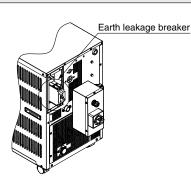



Option symbol

With Automatic Fluid Fill Function


HRS _____-A-20-<u>J</u>-R

♦ With automatic fluid fill function

By installing this at the automatic fluid fill port, the circulating fluid can be automatically supplied to the product using a built-in solenoid valve for a fluid fill while the circulating fluid is decreasing.

Applicable model	HRS018/030/050-A-20-J-R
Fluid fill method	Built-in solenoid valve for automatic fluid fill
Fluid fill pressure [MPa]	0.2 to 0.5

* When the option, with automatic fluid fill function, is selected, the weight increases by 1 kg.

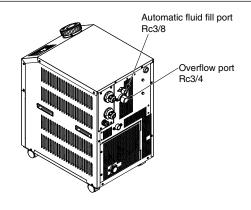



Option symbol

Large Capacity Tank Specification

Large capacity tank specification

Tank capacity: 12 L

- * No change in external dimensions
- * When the large capacity tank specification is selected, the weight increases by 1 kg.



HRS-R Series



Option symbol

High-Pressure Pump Mounted

-A-20-T-R


High-pressure pump mounted

Possible to choose a high-pressure pump in accordance with user's piping resistance. Cooling capacity will decrease by heat generated in the pump.

Applicable model			HRS018/030-A□-20-□T-R
	Rated flow (50/60 Hz)*1,*2	L/min	10 (0.35 MPa)/14 (0.35 MPa)
Rump	Maximum flow rate (50/60 Hz)	L/min	17/20
Pump	Maximum pump head (50/60 Hz)	m	70
	Output	W	610
Recommended earth leakage breaker capacity		Α	15
Cooling capacity*3		W	The cooling capacity reduces about 300 W from the value in the catalog. (due to an increase in the heat generation of the pump)

- *1 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C.
- *2 Required minimum flow rate for maintaining the cooling capacity or temperature stability
- *3 Cooling capacity will decrease as pump power increases.
- *4 When the option, high-pressure pump mounted, is selected, the weight increases by 7 kg.
- No change in external dimensions


Pump Capacity

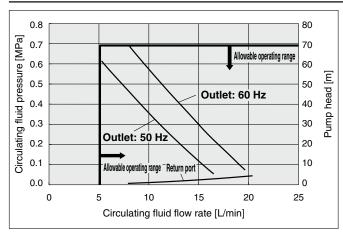

⚠ Caution

Mechanical Seal Pump

The pump used for the option T of the thermo-chiller HRS018/030-R uses a mechanical seal with the fixed ring and rotary ring used for the shaft seal part. If foreign matter enter the gap between the seals, this may cause a trouble such as leakage from the seal part or pump lock. Therefore, it is strongly recommended to install the particle filter in the return piping of the chiller. Mechanical seal

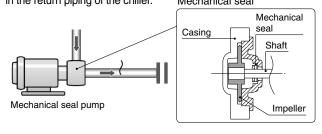



Option symbol


Stainless Steel Panel Specification

 
-A-20-V-R

Stainless steel panel specification


Exterior panel material is stainless steel (hairline finish).

* No change in external dimensions

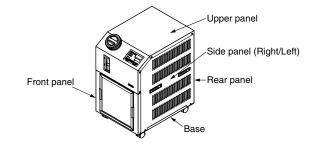



Option symbol

 

SI unit only

The circulating fluid temperature and pressure are displayed in SI units [MPa/°C] only.

If this option is not selected, a product with a unit selection function will be provided by default.

* No change in external dimensions





HRS-R Series Optional Accessories

1 Anti-Quake Bracket

This bracket can be used to reduce product damage in the case of an earthquake. An anchor bolt (M8) suitable for the flooring material should be prepared separately by the user. (Anti-quake bracket thickness: 1.6 mm)

			[mm]
Part no. (per unit)	Applicable model	Α	В
HRS-TK001	HRS018-A-20-□-R HRS030-A-20-□-R	555	(590)
HRS-TK002	HRS050-A-20-□-R	664	(698)

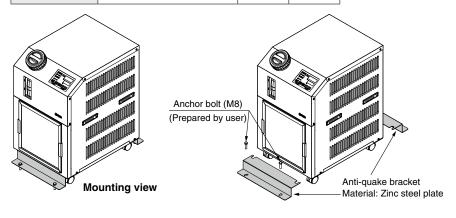

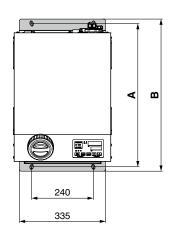

2 Piping Conversion Fitting


■ Conversion fitting for circulating fluid

+ Conversion fitting for drain outlet HRS018-A-20-□-R, HRS030-A-20-□-R

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, and for drain from Rc3/8 to G3/8 or NPT3/8. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

Part no.		Applicable model
HRS-EP001	G thread conversion	
IINS-EPUUI	fitting set	HRS018-A-20-□-R
HRS-EP002	NPT thread conversion	HRS030-A-20-□-R
THO-EPUUZ	fitting set	

When the options, with automatic fluid fill function "-J", or high-pressure pump mounted "-T" are selected, purchase $\ 3$ piping conversion fitting (for option), too.

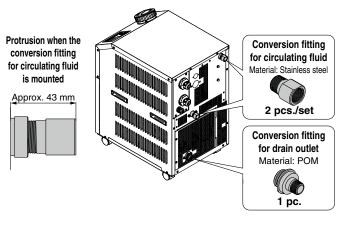


HRS050-A-20-□-R

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, and for drain from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

	Part no.	Applicable model	
HRS-EP009	G thread conversion		
HN3-EP009	fitting set	HRS050-A-20-□-R	
HRS-EP010	NPT thread conversion	TINGUGU-A-ZU-LI-N	
HRS-EPUIU	fitting set		

When the option, with automatic fluid fill function "-J", is selected, purchase ③ piping conversion fitting (for option), too.

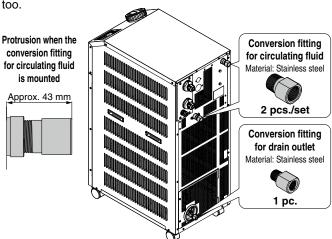



HRS-R Series


③ Piping Conversion Fitting (For Option)

■ Conversion fitting for automatic fluid fill port

This fitting changes the port size for the option, with automatic fluid fill function "-J" from Rc3/8, Rc3/4 to G3/8, G3/4 or NPT3/8, NPT3/4.

It is not necessary to purchase this when pipe thread type ${\sf F}$ or ${\sf N}$ is selected in "How to Order" since it is included in the product.

	Part no.	Applicable model
HRS-EP005	G thread conversion fitting set	HRS018-A-20-J-R HRS030-A-20-J-R
HRS-EP006	NPT thread conversion fitting set	HRS050-A-20-J-R

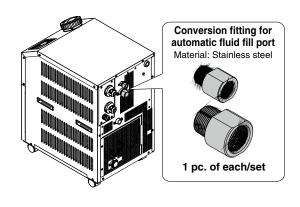


■ Conversion fitting for drain outlet

This fitting changes the port size for drain outlet for the option, high-pressure pump mounted "-T" from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

	Part no.	Applicable model	
HRS-EP007	G thread conversion fitting	HRS018-A-20-T-R HRS030-A-20-T-R	
HRS-EP008	NPT thread conversion fitting	HRS050-A-20-R*1	


^{*1} It is not necessary to purchase this when you purchase the HRS-EP009 to 010 since it is included in the product.

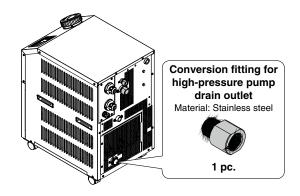

(4) Concentration Meter

This meter can be used to control the concentration of ethylene glycol aqueous solution regularly.

Part no.	Applicable model	
UD7 DD000	HRS018-A-20-□-R	
HRZ-BR002	HRS030-A-20-□-R	
	HRS050-A-20-□-R	

 

5 Bypass Piping Set

When the circulating fluid goes below the rated flow (7 L/min for the HRS018/030-R and 23/28 L/min for the HRS050-R), cooling capacity will be reduced and the temperature stability will be badly affected. In such a case, use the bypass piping set.

Part no.	o. Applicable model	
HRS-BP001	HRS018-A-20-□-R	
	HRS030-A-20-□-R	


Parts List


No.	Description	Fluid contact material	Qty.
1	Bypass tube	PFA	1
	(Part no.: TL0806)	FFA	(Approx. 700 mm)
2	Outlet piping (With ball valve)	Stainless steel	1
3	Return port piping	Stainless steel	1
4	Nipple (Size: 1/2)	Stainless steel	2

Part no.	Applicable model
HRS-BP004	HRS050-A-20-□-R

Parts List

No.	Description	Fluid contact material	Qty.
1	Hose	PVC	1
	11056	FVC	(Approx. 700 mm)
2	Outlet piping (With ball valve)	Stainless steel	1
3	Return port piping	Stainless steel	1
4	Nipple (Size: 1/2)	Stainless steel	2
(5)	Hose band	_	2

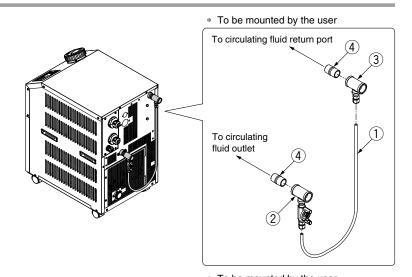


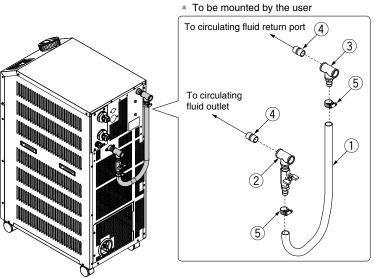

HRS-R Series

6 Particle Filter Set


This set can be used to remove foreign matter from the circulating fluid.

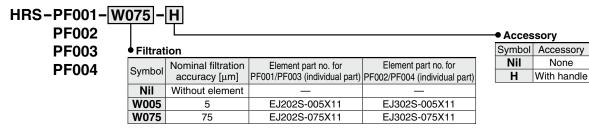

■ For circulating fluid outlet [Used to protect user's equipment]

Part no.	Applicable model
HRS-PF001	HRS018-A-20-□-R
/ Element length \	HRS030-A-20-□-R
L = 125 mm	HRS050-A-20-□-R
HRS-PF002	
(Element length)	HRS050-A-20-□-R


HRS-PF002 Element length L = 250 mm HRS050-A-20-□-R The following reference drawing shows the HRS-PF001 mounted on the HRS018.

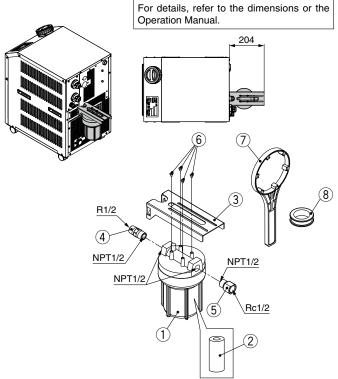

■ For circulating fluid return port [Used to protect thermo-chiller]

If foreign matter such as scales in the piping enter the circulating fluid, this may cause the pump to malfunction. Therefore, it is strongly recommended to install the particle filter set.

Part no.	Applicable model
HRS-PF003	HRS018-A-20-□-R
/ Element length \	HRS030-A-20-□-R
\ L = 125 mm /	HRS050-A-20-□-R
HRS-PF004	
(Element length) L = 250 mm	HRS050-A-20-□-R

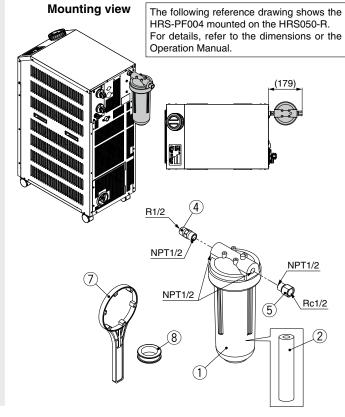

Parts List

	**** =							
No.	Model	Description	Fluid contact material	Qty.	Note			
1	_	Body	PP	1	_			
	EJ202S-005X11	Element (Length L = 125 mm)		1	For HRS-PF001/003	The product should be		
2	EJ202S-075X11	Element (Length L = 125 mm)	PP/PE	1	F01 Hh3-FF001/003	replaced when the		
	EJ302S-005X11	Element (Length L = 250 mm)	FF/FE	1	For HRS-PF002/004	pressure drop reaches		
	EJ302S-075X11	Liement (Length L = 250 mm)		1	F0FFIRS-FF002/004	0.1 MPa.		
3	_	Particle filter bracket	_	1	For HRS-PF001/002			
4	_	Nipple	Stainless steel	1	Conversion from R to NPT			
5	_	Extension piece	Stainless steel	1	Conversion from NPT to Rc			
6	_	Tapping screw	_	4	_			
7	_	Handle	_	1	When -H is selected			
8	<u> </u>	Sealant tape	PTFE	1	<u> </u>	<u> </u>		


⑦ Dustproof Filter

A disposable dustproof filter is mounted on the front panel.

Part no. Applicable model	
HRS-FL003	HRS018-A-20-□-R HRS030-A-20-□-R HRS050-A-20-□-R

Parts List

No.	Description	Part no.	Note
(1)	Dustproof filter	HRS-FL003	Size: 295 x 295 (5 filters per set)

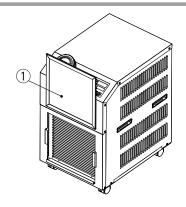

Separately-Installed Power Transformer


This transformer does not have CE/UKCA marking and is not compliant with UL standards.

Specifications


eposition and the second and the sec								
Dort no	Applicable model	Volume Type		Inlet voltage		Outlet	voltage	
Part no.	Part no. Applicable model Volume		Type	50 Hz 60 Hz		50 Hz	60 Hz	
IDF-TR2000-9				_	240 VAC	_		
IDF-TR2000-10	HRS018-A-20 HRS030-A-20	2 kVA	Single- phase	380, 400, 415 VAC	380 to 400, 400 to 415, 415 to 440 VAC	000.7/40	200, 220 VAC	
IDF-TR2000-11				440, 460 VAC	440 to 460, 460 to 500 VAC	200 VAC		

^{*} For the HRS050 model: To be prepared by the user

IDF-TR2000-9

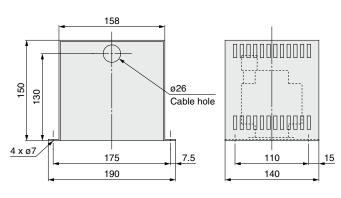

IDF-TR2000-10, 11

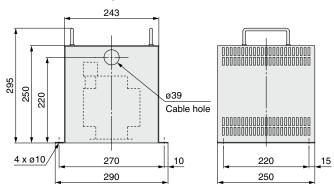


9 Filter for Circulating Fluid Fill Port

Prevents foreign matter from entering the tank when supplying the circulating fluid. Can be used just by fitting into the circulating fluid fill port.

■ Filter for circulating fluid fill port HRS-PF007

Material	Stainless steel 304, Stainless steel 316
Mesh size	200

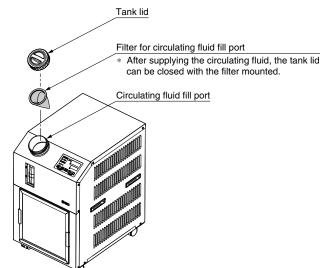

HRS-R Series **Cooling Capacity Calculation**

Required Cooling Capacity Calculation

Example 1: When the heat generation amount in the user's equipment is known.

The heat generation amount can be determined based on the power consumption or output of the heat generating area — i.e. the area requiring cooling — within the user's equipment.*1 I: Current

1 Derive the heat generation amount from the power consumption.

Q: Heat generation User's equipment

P

Power consumption

Power consumption P: 1000 [W]

$$Q = P = 1000 [W]$$

Cooling capacity = Considering a safety factor of 20%,

② Derive the heat generation amount from the power supply output.

Power supply output VI: 1.0 [kVA]

 $Q = P = V \times I \times Power factor$

In this example, using a power factor of 0.85:

$$= 1.0 [kVA] \times 0.85 = 0.85 [kW] = 850 [W]$$

Cooling capacity = Considering a safety factor of 20%,

3 Derive the heat generation amount from the output.

V: Power

supply voltage

Output (shaft power, etc.) W: 800 [W]

$$Q = P = \frac{W}{\text{Efficiency}}$$

In this example, using an efficiency of 0.7:

Example of conventional units (Reference)

$$=\frac{800}{0.7}=1143$$
 [W]

Cooling capacity = Considering a safety factor of 20%,

Example 2: When the heat generation amount in the user's equipment is not known.

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount by user's equipment Q: Unknown [W] ([J/s]) Circulating fluid : Tap water*1 Circulating fluid mass flow rate qm : $(= \rho \times qv \div 60) [kg/s]$ Circulating fluid density of : 1 [kg/dm³] Circulating fluid (volume) flow rate qv : 10 [dm³/min] Circulating fluid specific heat C : 4.2 x 10³ [J/(kg·K)] Circulating fluid outlet temperature T1 : 293 [K] (20 [°C]) Circulating fluid return temperature T2 : 295 [K] (22 [°C]) Circulating fluid temperature difference ΔT : 2.0 [K] (= T₂ - T₁) Conversion factor: minutes to seconds (SI units): 60 [s/min]

*1 Refer to page 202 for the typical physical property value of tap water or other circulating fluids.

$$Q = q_m \times C \times (T_2 - T_1)$$

$$= \frac{\rho \times q_{V} \times C \times \Delta T}{60} = \frac{1 \times 10 \times 4.2 \times 10^{3} \times 2.0}{60}$$

 $= 1400 [J/s] \approx 1400 [W]$

Cooling capacity = Considering a safety factor of 20%,

1400 [W] x 1.2 = 1680 [W]

Heat generation amount by user's equipment Q: Unknown [cal/h] \rightarrow [W] Circulating fluid : Tap water*1 : $(= \rho \times q_v \times 60)$ [kgf/h] Circulating fluid weight flow rate qm : 1 [kgf/L] Circulating fluid weight volume ratio γ Circulating fluid (volume) flow rate qv : 10 [L/min] : 1.0 x 10³ [cal/(kgf.°C)] Circulating fluid specific heat C Circulating fluid outlet temperature T1 : 20 [°C] Circulating fluid return temperature T2 : 22 [°C] Circulating fluid temperature difference ΔT : 2.0 [°C] (= T₂ - T₁) Conversion factor: hours to minutes : 60 [min/h] Conversion factor: kcal/h to kW : 860 [(cal/h)/W] qm x C x (T2 - T1) γ x qv x 60 x C x Δ T 860 $1 \times 10 \times 60 \times 1.0 \times 10^3 \times 2.0$ 1200000 [cal/h] 860 ≈ 1400 [W] Cooling capacity = Considering a safety factor of 20%, 1400 [W] x 1.2 = 1680 [W]

^{*1} The examples above calculate the heat generation amount based on the power consumption. The actual heat generation amount may differ due to the structure of the user's equipment. Be sure to check it carefully

Required Cooling Capacity Calculation

Example 3: When there is no heat generation, and when cooling the object below a certain temperature and period of time.

Heat quantity by cooled substance (per unit time) Q: Unknown [W] ([J/s])

Cooled substance : Water Cooled substance mass m : $(= \rho \times V)$ [kg]

Cooled substance density p : 1 [kg/L] Cooled substance total volume V : 20 [dm³]


: 4.2 x 10³ [J/(kg·K)] Cooled substance specific heat C Cooled substance temperature when cooling begins To : 305 [K] (32 [$^{\circ}$ C])

Cooled substance temperature after t hour Tt : 293 [K] (20 [°C]) Cooling temperature difference ΔT : $12 [K] (= T_0 - T_t)$ Cooling time Δt : 900 [s] (= 15 [min])

* Refer to the following for the typical physical property values by circulating fluid.

$$\begin{aligned} \mathbf{Q} &= \frac{\mathbf{m} \ \mathbf{x} \ \mathbf{C} \ \mathbf{x} \ (T_0 - T_t)}{\Delta t} = \frac{\rho \ \mathbf{x} \ \mathbf{V} \ \mathbf{x} \ \mathbf{C} \ \mathbf{x} \ \Delta T}{\Delta t} \\ &= \frac{1 \ \mathbf{x} \ 20 \ \mathbf{x} \ 4.2 \ \mathbf{x} \ 10^3 \ \mathbf{x} \ 12}{900} = 1120 \ [\mathrm{J/s}] \approx 1120 \ [\mathrm{W}] \end{aligned}$$

Cooling capacity = Considering a safety factor of 20%,

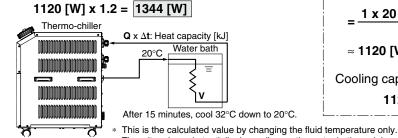

Example of conventional units (Reference)

Heat quantity by cooled substance (per unit time) $Q: Unknown [cal/h] \rightarrow [W]$

Cooled substance : $(= \rho \times V)$ [kgf] Cooled substance weight m : 1 [kgf/L] Cooled substance weight volume ratio γ

Cooled substance total volume V : 20 [L]

Cooled substance specific heat C : 1.0 x 103 [cal/(kgf.°C)]

Cooled substance temperature when

cooling begins To : 32 [°C] Cooled substance temperature after t hour Tt: 20 [°C]

Cooling temperature difference ΔT : 12 [$^{\circ}$ C] (= **T**0 – **T**t)

Cooling time Δt : 15 [min] Conversion factor: hours to minutes

: 60 [min/h] Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$\mathbf{Q} = \frac{\mathbf{m} \times \mathbf{C} \times (\mathbf{T}_0 - \mathbf{T}_t)}{\Delta t \times 860} = \frac{\gamma \times \mathbf{V} \times 60 \times \mathbf{C} \times \Delta \mathbf{T}}{\Delta t \times 860}$$

$$= \frac{1 \times 20 \times 60 \times 1.0 \times 10^3 \times 12}{15 \times 860}$$

≈ 1120 [W]

Cooling capacity = Considering a safety factor of 20%,

1120 [W] x 1.2 = 1344 [W]

Thus, it varies substantially depending on the water bath or piping shape. Precautions on Cooling Capacity Calculation

1. Heating capacity

When the circulating fluid temperature is set above room temperature, it needs to be heated by the thermo-chiller. The heating capacity depends on the circulating fluid temperature. Consider the radiation rate and heat capacity of the user's equipment and check beforehand if the required heating capacity is provided.

2. Pump capacity

<Circulating fluid flow rate>

Circulating fluid flow rate varies depending on the circulating fluid discharge pressure. Consider the installation height difference between the thermo-chiller and the user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved, using the pump capacity curves.

<Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves. Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

Circulating Fluid Typical Physical Property Values

1. This catalog uses the following values for density and specific heat in calculating the required cooling capacity.

 ρ : 1 [kg/L] (or, using conventional units, weight volume ratio γ = 1 [kgf/L]) C: 4.19 x 10³ [J/(kg·K)] (or, using conventional units, 1 x 10³ [cal/(kgf·°C)]) Density Specific heat

2. Values for density and specific heat change slightly according to temperature shown below. Use this as a reference. Water 15% Ethylene Glycol Aqueous Solution

Physical property value	Density ρ	Specific heat C	Convention	onal units
Temperature	[kg/L]	[J/(kg·K)]	Weight volume ratio γ [kgf/L]	Specific heat C [cal/(kgf.°C)]
5°C	1.00	4.2 x 10 ³	1.00	1 x 10 ³
10°C	1.00	4.19 x 10 ³	1.00	1 x 10 ³
15°C	1.00	4.19 x 10 ³	1.00	1 x 10 ³
20°C	1.00	4.18 x 10 ³	1.00	1 x 10 ³
25°C	1.00	4.18 x 10 ³	1.00	1 x 10 ³
30°C	1.00	4.18 x 10 ³	1.00	1 x 10 ³
35°C	0.99	4.18 x 10 ³	0.99	1 x 10 ³
40°C	0.99	4.18 x 10 ³	0.99	1 x 10 ³

Physical property value	Density ρ	Specific heat C	Conventional units	
Temperature	[kg/L]	[J/(kg·K)]	Weight volume ratio γ [kgf/L]	Specific heat C [cal/(kgf.°C)]
5°C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³
10°C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³
15°C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³
20°C	1.01	3.91 x 10 ³	1.01	0.93 x 10 ³
25°C	1.01	3.91 x 10 ³	1.01	0.93 x 10 ³
30°C	1.01	3.91 x 10 ³	1.01	0.94 x 10 ³
35°C	1.01	3.91 x 10 ³	1.01	0.94 x 10 ³
40°C	1.01	3.92 x 10 ³	1.01	0.94 x 10 ³

Shown above are reference values. Contact circulating fluid supplier for





Be sure to read this before handling the products. For safety instructions and temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Design

⚠ Warning

- 1. This catalog shows the specifications of a single unit.
 - Check the specifications of the single unit (contents of this catalog) and thoroughly consider the adaptability between the user's system and this unit.
 - 2) Although a protection circuit as a single unit is installed, prepare a drain pan, water leakage sensor, discharge air facility, and emergency stop equipment, depending on the user's operating conditions. Also, the user is requested to carry out a safety design for the whole system.
- When attempting to cool areas that are open to the atmosphere (tanks, pipes), plan your piping system accordingly.

When cooling open-air external tanks, arrange the piping so that there are coil pipes for cooling inside the tanks and to carry back the entire flow volume of circulating fluid that is released.

Use non-corrosive material for circulating fluid contact parts.

The recommended circulating fluid is tap water or 15% ethylene glycol aqueous solution. Using corrosive materials such as aluminum or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid circuit. Therefore, take sufficient care when selecting fluid contact part materials such as piping.

4. Design the piping so that no foreign matter enters the chiller.

If foreign matter, such as scales in the piping, enters the circulating fluid, this may cause the pump to malfunction.

Selection

Marning

1. Model selection

When selecting a thermo-chiller model, the amount of heat generation from the user's equipment must be known. Obtain this value, referring to "Cooling Capacity Calculation" on pages 201 and 202 before selecting a model.

Handling

⚠ Warning

1. Thoroughly read the operation manual.

Read the operation manual completely before operation, and keep the manual where it can be referred to as necessary.

Transportation/Carriage/Movement


Marning

- 1. This product is heavy. Pay attention to safety and the position of the product when it is transported, carried, and moved.
- 2. Read the operation manual carefully before moving the product after unpacking.

⚠ Caution

 Never put the product down on its side as this may cause failure.

The product will be delivered in the packaging shown below.

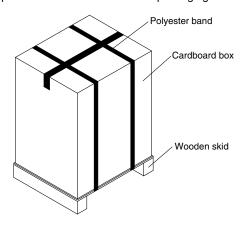

Model	Weight [kg]*1	Dimensions [mm]	
HRS018-A-20-□-R HRS030-A-20-□-R		Height 790 x Width 470 x Depth 580	
When option B or T is included in the model above (HRS018/030)	See *1 below.	Height 790 x Width 470 x Depth 780	
HRS050-A-20-□-R	80	Height 1160 x Width 450 x Depth 670	
When option B is included in the model above (HRS050)	See *1 below.	Height 1200 x Width 515 x Depth 995	

st 1 For models with an option, the weight increases as shown below.

Option	Description	Additional weight		
symbol	Description	HRS018/030	HRS050	
-B	With earth leakage breaker	+6 kg +7 kg		
-J	With automatic fluid fill function	+1 kg		
-L	Large capacity tank specification	+1 kg		
-T	High-pressure pump mounted	+11 kg —		
-V	Stainless steel panel specification	No additional weight		
-W	SI unit only	No additional weight		

⚠ Caution

If this product is to be transported after delivery, please use the original packaging the product was delivered in. If other packaging is to be used, carefully package the product so as to prevent the product from incurring any damage during transport.





Be sure to read this before handling the products. For safety instructions and temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Operating Environment/Storage Environment

⚠ Warning

- 1. Do not use in the following environment as it will lead to a breakdown.
 - 1) Outdoors
 - In locations where water, water vapor, salt water, and oil may splash on the product
 - 3) In locations where there is a large amount of dust and particles
 - 4) In locations where corrosive gases, organic solvents, chemical fluids, or flammable gases are present (This product is not explosion proof.)
 - 5) In locations where the ambient temperature exceeds the limits as mentioned below

During transportation/storage: 0 to 50°C (But as long as water or circulating fluid are not left inside the pipings)

During operation: 5 to 45°C

6) In locations where the ambient humidity is out of the following range or where condensation occurs

During transportation/storage: 15 to 85% During operation: 30 to 70%

- 7) In locations which receive direct sunlight or radiated heat
- 8) In locations where there is a heat source nearby and the ventilation is poor
- 9) In locations where temperature substantially changes
- In locations where strong magnetic noise occurs (In locations where strong electric fields, strong magnetic fields, and surge voltage occur)
- 11) In locations where static electricity occurs, or conditions which make the product discharge static electricity
- 12) In locations where high frequency occurs
- 13) In locations where damage is likely to occur due to lightning
- 14) In locations at an altitude of 3000 m or higher (Except during storage and transportation)
 - * For altitudes of 1000 m or higher
 Because of lower air density, the heat radiation efficiencies of the devices in the product will be lower in the location at an altitude of 1000 m or higher. Therefore, the maximum ambient temperature to use and the cooling capacity will lower according to the descriptions in the table below

Select the thermo-chiller considering the descriptions.

- ① Upper limit of ambient temperature: Use the product in ambient temperature of the described value or lower at each altitude.
- ② Cooling capacity coefficient: The product's cooling capacity will lower to one that multiplied by the described value at each altitude.

Altitude [m]	1 Upper limit of ambient temperature [°C]	② Cooling capacity coefficient
Less than 1000 m	45	1.00
Less than 1500 m	42	0.85
Less than 2000 m	38	0.80
Less than 2500 m	35	0.75
Less than 3000 m	32	0.70

- 15) In locations where strong impacts or vibrations occur
- 16) In locations where a massive force strong enough to deform the product is applied or the weight from a heavy object is applied
- In locations where there is not sufficient space for maintenance
- 18) Environment in which the product is exposed to particles or water splash that is higher than IP54

Operating Environment/Storage Environment

Marning

2. Install in an environment where the unit will not come into direct contact with rain or snow.

These models are for indoor use only.

Do not install outdoors where rain or snow may fall on them.

3. Conduct ventilation and cooling to discharge heat.

The heat which is cooled down through air-cooled condenser is discharged.

When using in a room which is shut tightly, ambient temperature will exceed the specification range stipulated in this catalog, which will activate the safety detector and stop the operation. In order to avoid this situation, discharge the heat outside of a room by ventilation or cooling facilities.

4. The product is not designed for clean room usage. It generates particles internally.

Mounting/Installation

⚠ Warning

- 1. Do not use the product outdoors.
- Do not place heavy objects on top of this product, or step on it.

The external panel can be deformed and danger can result.

∧ Caution

- Install on a rigid floor which can withstand this product's weight.
- When installing without the casters, use the adjuster feet, etc. to raise the chiller to the following heights or more.

This product cannot be directly installed on the floor as some screws come out from the bottom of the product.

- HRS018/030-R 10 mm
- HRS050-R 15 mm






Be sure to read this before handling the products. For safety instructions and temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Mounting/Installation

- Refer to the operation manual for this product, and secure an installation space that is necessary for the maintenance and ventilation.
 - The air-cooled type product exhausts heat using the fan that is mounted to the product. If the product is operated with insufficient ventilation, ambient temperature may exceed 45°C, and this will affect the performance and life of the product. To prevent this ensure that suitable ventilation is available (see below).
 - For installation indoors, ventilation ports and a ventilation fan should be equipped as needed.

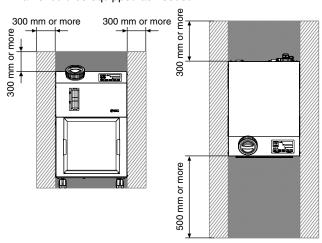

<Heat radiation amount/Required ventilation rate>

	Heat radiation	Required ventilation rate [m ³ /min]		
Model	amount	Differential temp. of 3°C between inside	Differential temp. of 6°C between inside	
	[kW]	and outside of installation area	and outside of installation area	
HRS018-R	Approx. 4	70	40	
HRS030-R		100	60	
HRS050-R	Approx.10	140	70	

Piping

⚠ Caution

 Regarding the circulating fluid pipings, consider carefully the suitability for shutoff pressure, temperature and circulating fluid.

If the operating performance is not sufficient, the pipings may burst during operation. Also, the use of corrosive materials such as aluminum or iron for fluid contact parts, such as piping, may not only lead to clogging or leakage in the circulating fluid circuit but also refrigerant leakage and other unexpected problems. Provide protection against corrosion when you use the product.

2. Select the piping port size which can exceed the rated flow.

For the rated flow, refer to the pump capacity table.

- 3. When tightening at the circulating fluid inlet and outlet, drain port or overflow port of this product, use a pipe wrench to clamp the connection ports.
- 4. For the circulating fluid piping connection, install a drain pan and wastewater collection pit just in case the circulating fluid may leak.
- 5. This product series is constant-temperature fluid circulating machines with built-in tanks.

Do not install equipment on your system side such as pumps that forcibly return the circulating fluid to the unit. Also, if you attach an external tank that is open to the air, it may become impossible to circulate the circulating fluid. Proceed with caution.

Electrical Wiring


Marning

 Grounding should never be connected to a water line, gas line or lightning rod.

⚠ Caution

- 1. Communication cable should be prepared by the user.
- 2. Provide a stable power supply which is not affected by surge or distortion.

If the voltage increase ratio (dV/dt) at the zero cross should exceed 40 V/200 $\mu sec.$, it may result in malfunction.

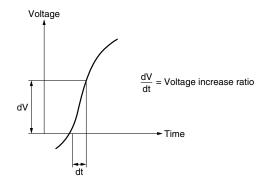



Be sure to read this before handling the products. For safety instructions and temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Circulating Fluid

Caution

- 1. Avoid oil or other foreign matter entering the circulating fluid.
- 2. When water is used as a circulating fluid, SMC recommends the water quality shown in the following table as reference.
 - Including water used for dilution of ethylene glycol aqueous solutions.
 - In most areas, tap water can be used. However, if the tap water in the area is hard, there is a possibility of failure or performance decline due to limescale build-up. To soften the water and avoid problems, consider using water hardness filters.

Tap Water (as a Circulating Fluid) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

				Influ	ence
	Item		Standard value	Corrosion	Scale generation
	pH (at 25°C)	_	6.0 to 8.0	0	0
ے	Electric conductivity (25°C)	[µS/cm]	100*1 to 300*1	0	0
Standard item	Chloride ion (CI-)	[mg/L]	50 or less	0	
2	Sulfuric acid ion (SO ₄ ²⁻)	[mg/L]	50 or less	0	
g	Acid consumption amount (at pH4.8)	[mg/L]	50 or less		0
tar	Total hardness	[mg/L]	70 or less		0
S	Calcium hardness (CaCO ₃)	[mg/L]	50 or less		0
	Ionic state silica (SiO ₂)	[mg/L]	30 or less		0
item	Iron (Fe)	[mg/L]	0.3 or less	0	0
	Copper (Cu)	[mg/L]	0.1 or less	0	
Se	Sulfide ion (S ₂ -)	[mg/L]	Should not be detected	0	
Reference	Ammonium ion (NH ₄ +)	[mg/L]	0.1 or less	0	
efe	Residual chlorine (CI)	[mg/L]	0.3 or less	0	
ď	Free carbon (CO ₂)	[mg/L]	4.0 or less	0	

- *1 In the case of [M Ω ·cm], it will be 0.003 to 0.01.
- O: Factors that have an effect on corrosion or scale generation
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.
- 3. Use an ethylene glycol aqueous solution that does not contain additives such as preservatives.
- 4. When using ethylene glycol aqueous solution, maintain a maximum concentration of 15%.

Overly high concentrations can cause a pump overload. Low concentrations, however, can lead to freezing when circulating fluid temperature is 10°C or lower and cause the thermo-chiller to break down.

5. A magnet pump or mechanical seal pump is used as the circulating pump for the circulating fluid.

It is particularly impossible to use liquid including metallic powders such as iron powder.

6. The circulating fluids listed below have been tested for thermo-chiller compatibility.

No.	Fluid	Manufacturer	Concentration
4	Dowcal™ 100 Heat	The Dow Chemical	Dilute to 30% in
'	Transfer Fluid	Company	water
2	ControXid 1642	Oelheld GmbH	Ready to use
3	Hexid A4	Applied Thermal Control Limited	Ready to use
4	Coolflow IGE	Hydratech Division of Liquitherm Technologies Group Ltd	Dilute to 25% in water
5	NALCO® CCL105	Nalco Water, an Ecolab Company	Ready to use

- The chiller cooling capacity and pump capacity performance may change with using the fluids listed. Customers should verify the performances with the fluid and decide to use the fluid.
- Check the compatibility with the piping and the wetted parts of the customer's equipment before use.
- Check with the circulating fluid manufacturer for the following.
 - 1) Countries and regions where it can be obtained and used 3) Safety data sheets
- 2) Handling and maintenance 4) Specifications and physical properties
 Concentration has to be value listed or less. Overly bird concentrations can cause a
- Concentration has to be value listed or less. Overly high concentrations can cause a
 pump overload. Low concentrations, however, can lead to freezing when circulating
 fluid temperature is 10°C or lower and cause the thermo-chiller to break down.
- Using the fluid listed for a long time, the chiller heat exchanger performance may be reduced due to
 additive deposits. It is recommended to regularly flush the inside of the piping and chiller with clean water.
- In the case of a mechanical seal pump, additive deposits may appear on the outside, it is not a malfunction.

Operation

⚠ Warning

1. Confirmation before operation

 The fluid level of a tank should be within the specified range of "HIGH" and "LOW."

When exceeding the specified level, the circulating fluid will overflow.

2) Remove the air.

Conduct a trial operation, looking at the fluid level.

Since the fluid level will go down when the air is removed from the user's piping system, supply water once again when the fluid level is reduced. When there is no reduction in the fluid level, the job of removing the air is completed.

Pump can be operated independently.

2. Confirmation during operation

· Check the circulating fluid temperature.

The operating temperature range of the circulating fluid is between 5 and 40°C.

When the amount of heat generated from the user's equipment is greater than the product's capability, the circulating fluid temperature may exceed this range. Use caution regarding this matter.

3. Emergency stop method

When an abnormality is confirmed, stop the machine immediately. Be sure to shut off the breaker of the user's power supply.

Operation Restart Time/Operation and Suspension Frequency

⚠ Caution

- Wait five minutes or more before restarting operation after it has been stopped. If the operation is restarted within five minutes, the protection circuit may activate and the operation may not start properly.
- 2. Operation and suspension frequency should not exceed 10 times per day. Frequently switching between operation and suspension may result in the malfunction of the refrigeration circuit.

Protection Circuit

⚠ Caution

- 1. If operating in the below conditions, the protection circuit will activate and an operation may not be performed or will stop.
 - \bullet Power supply voltage is not within the rated voltage range of $\pm 10\%.$
 - In case the water level inside the tank is reduced abnormally.
 - Circulating fluid temperature is too high.
 - Compared to the cooling capacity, the heat generation amount of the user's equipment is too high.
 - Ambient temperature is too high. (45°C or more)
 - · Refrigerant pressure is too high.
 - Ventilation grille is clogged with dust or dirt.





Be sure to read this before handling the products. For safety instructions and temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Maintenance



<Periodical inspection every one month>

1. Clean the ventilation grille.

If the dustproof filter becomes clogged with dust or debris, a decline in cooling performance can result.

In order to avoid deforming or damaging the dustproof filter, clean it with a long-haired brush or air gun.

<Periodical inspection every three months>

1. Inspect the circulating fluid.

- 1) When using tap water
 - · Replacement of tap water

Failure to replace the tap water can lead to the development of bacteria and algae. Replace it regularly according to your usage conditions.

· Tank cleaning

Consider whether dirt, slime, or foreign matter may be present in the circulating fluid inside the tank, and carry out regular cleanings of the tank.

2) When using ethylene glycol aqueous solution

Use a concentration meter to confirm that the concentration does not exceed 15%.

Dilute or add as needed to adjust the concentration.

<Periodical inspection during the winter season>

1. Make water-removal arrangements beforehand.

If there is a risk of the circulating fluid freezing when the product is stopped, release the circulating fluid in advance.

2. Consult a professional.

For additional methods to prevent freezing (such as commercially available tape heaters, etc.), consult a professional for advice.

■ Refrigerant with GWP reference

	Global Warming Potential (GWP)			
Refrigerant	Regulation (EU)	Fluorocarbon Emissions Control Act (Japan)		
	2024/573, AIM Act 40 CFR Part 84	GWP value labeled on products	GWP value to be used for reporting the calculated amount of leakage	
R134a	1,430	1,430	1,300	
R404A	3,922	3,920	3,940	
R407C	1,774	1,770	1,620	
R410A	2,088	2,090	1,920	
R448A	1,386	1,390	1,270	
R454C	146	145	146	

^{*} This product is hermetically sealed and contains fluorinated greenhouse gases (HFC). When this product is sold on the market in the EU after January 1, 2017, it needs to be compliant with the quota system of the F-Gas Regulation in the EU.

^{*} See specification table for refrigerant used in the product.