

Clean Design Manifold Valve JSY5000-H Series



Crevice free exterior and can be cleaned without disassembly Cleanable space between valves

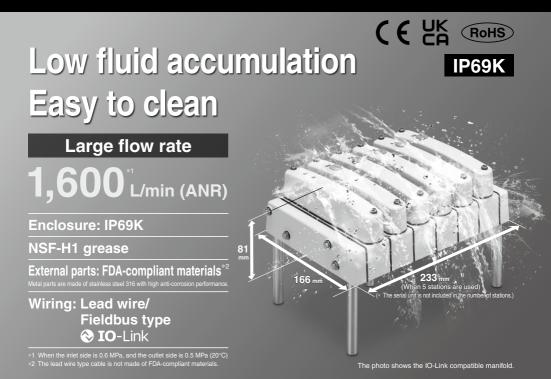


Cleanable space between valves Valve width is 15 mm.

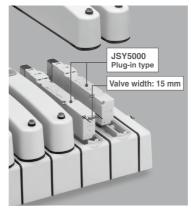

Sub-plate (Single unit)




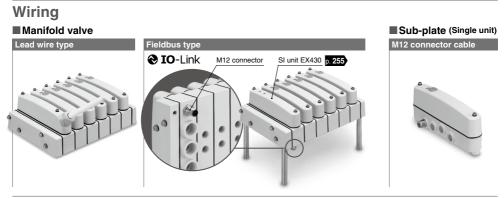

IO-Link compatible

Integratable with various existing networks

IO-Link devices can be easily connected to various networks via the IO-Link master, which acts as a gateway between IO-Link communication and various Fieldbusses. Solenoid valves can be connected for communication without relying upon a Fieldbus or PLC.

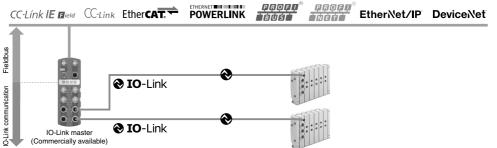


Series Variations

			A) Q(D) mont o	ine			Wir	ring	
	4(A), 2(B) port size					Common specifications			
			One-tou	ch fitting		Rated			
Variations	G1/4	Screw fitting			voltage	Positive	Negative		
	(Without fitting)	ø8	ø10	ø5/16"	ø3/8"		common	common	
		Brass Stainless steel	Brass Stainless steel	Brass Stainless steel	Brass Stainless steel				
Plug-in Lead wire type (34 cores) p. 234	٠	•	•	•	•		٠	٠	
Plug-in Fieldbus type IO-Link p. 234	•	•	•	•	٠	24 VDC	_	٠	
Sub-plate type	٠	•	•	•	۲		٠	•	

● Standard ○ Option ▲ Made to order




Manifold Parts

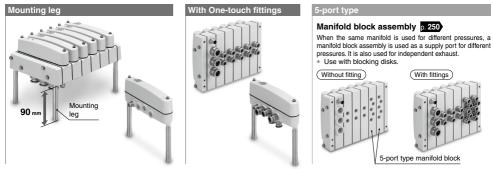

Manifold Options

Blanking plate [With two mounting screws] p.257

Used when valve additions are expected or for maintenance

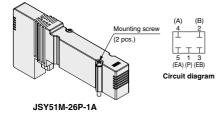

SUP/EXH blocking disk p. 257

[SUP blocking disk]

By inserting the SUP blocking disk in the pressure supply passage of the manifold valve, can provide two different high and low pressure in one manifold.

[EXH blocking disk]

By inserting the EXH blocking disk in the exhaust passage of the manifold valve, can separate the exhaust from the valve so it does not affect the other valves. It can also be used for the manifold for the positive pressure and vacuum mixed manifold. (2 pieces are required to block EA/EB both sides of the EXH.)




JSY5000	JSY51M-40P-2A	JSY51M-40P-2A
Series	SUP blocking disk	EXH blocking disk

Manifold options		Valve o	options
Blanking plate	SUP/EXH blocking disk	Vacuum/ Low pressure specification	Reverse pressure
О р. 257	О р. 257	▲ External pilot	▲ External pilot
О р. 257	О р. 257	▲ External pilot	▲ External pilot
_	_	▲ External pilot	▲ External pilot

Tube releasing tool p. 256

This tool is used for removing the tube from port A and B

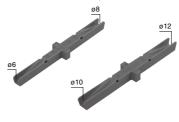



Trademark

DeviceNet[®] is a registered trademark of ODVA, Inc.


EtherNet/IP® is a registered trademark of ODVA, Inc.

EtherCAT[®] is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.



IP69K manifold

IP69K products are IP6X (IEC/EN 60529) and IPX9K (ISO 20653) compliant and protected against dust and high-pressure hot water.

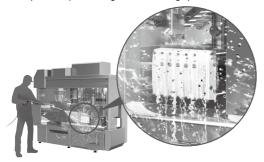


Glossary of Terms

IP6X: Dust-tight

IPX9K: High-pressure and temperature jet wash

Not adversely affected under the following conditions.


Sample placed on a turntable and rotated at a speed of 5 ±1 rpm. Hot pressurized water at 80 ±5°C and b5°C and

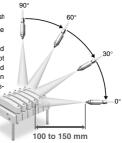


Applications


Installed inside equipment

Installed near actuators

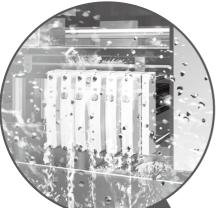

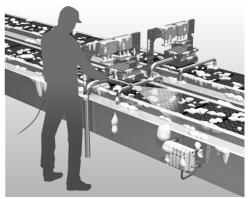



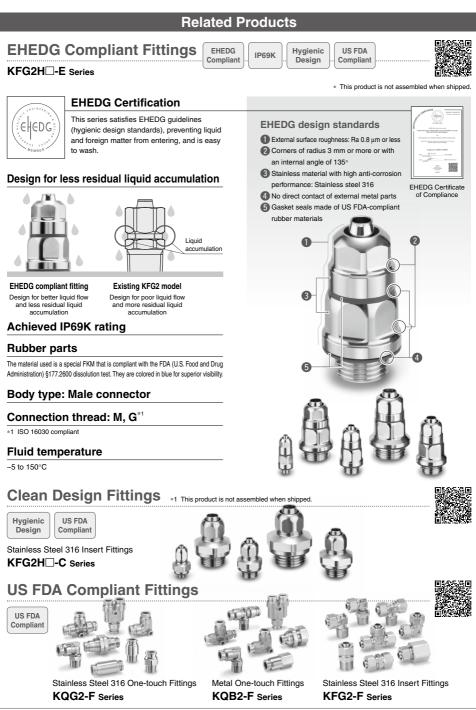

@SMC

Related Products

FDA (U.S. Food and Drug Administration) Compliant Tubing

.



Polyurethane Tubing

TU-X214

TLM/TILM



 Complies with the FDA (U.S. Food and Drug Administration) § 177.2600 dissolution test
 Complies with the FU No 10/0011 dissolution test

 Complies with the EU No 10/2011 dissolution test 		
Metric size	Color	
ø4, ø6, ø8, ø10, ø12	Black, White, Red, Blue, Yellow, Green, Clear, Orange	

Fluoropolymer Tubing (PFA)



 Complies with the FDA (U.S. Food and Drug Administration) § 177.1550 dissolution test

· Complies with the FDA (U.S. Food and Drug Administration)

Food Sanitation Law compliant*1

Metric size	Inch size	Color
ø2, ø3, ø4, ø6, ø8, ø10,	ø1/8", ø3/16", ø1/4", ø3/8",	Translucent,
ø12, ø16, ø19, ø25	ø1/2", ø3/4", ø1", ø1 1/4"	Black, Red, Blue

Soft Fluoropolymer Tubing

TD/TID

 Completes with the FDA (0.3.1000 § 177.1550 dissolution test
 Food Sanitation Law compliant*1

- Tood Gaintailon Law compliant			
Metric size	Inch size	Color	
ø4, ø6, ø8, ø10, ø12	ø1/8", ø3/16", ø1/4", ø3/8", ø1/2"	Translucent	

Soft Polyolefin Tubing TPS

	1 ÷.	90
- KR.	25	- 18 - L
- 5 -	24	ъ.
- jes	25	÷.
1.00	25 -	TD.
	512.7	1646

Complies with the FDA (U.S. Food and Drug Administration) § 175.300 dissolution test

Metric size	Color
ø4, ø6, ø8, ø10, ø12	White, Blue, Yellow

Fluoropolymer Tubing

TL/TIL

TH/TIH

§ 177.1550 dissolution test • Food Sanitation Law complia	nt*1	
Metric size	Inch size	Color
ø4, ø6, ø8, ø10, ø12, ø19	ø1/8", ø3/16", ø1/4", ø3/8", ø1/2", ø3/4", ø1"	Translucent

FEP Tubing (Fluoropolymer)



 Complies with the FDA (U.S. Food and Drug Administration) § 177.1550 dissolution test

· Complies with the FDA (U.S. Food and Drug Administration)

Food Sanitation Law compliant*1

Metric size	Inch size	Color
ø4, ø6, ø8, ø10, ø12	ø1/8", ø3/16", ø1/4", ø3/8", ø1/2", ø3/4"	Translucent, Black, Red, Blue

Polyolefin Tubing



 Complies with the FDA (U.S. Food and Drug Administration) § 175.300 dissolution test

Metric size	Color
ø4, ø6, ø8, ø10, ø12	White, Blue, Yellow

*1 Testing in compliance with Japan's Food Sanitation Law based on the 370th notice given by the Ministry of Health and Welfare in 1959



CONTENTS

Valve Specifications	····· p. 229
Valve Specifications (JSY5000-H Plug-in Type)	····· p. 230
Manifold Specifications	····· p. 230
Manifold Flow Rate Characteristics/Weight	p. 230
Valve Weight	····· p. 230
Response Time	····· p. 230
Connector Wiring Layout	p. 230
Valve Construction	p. 231
Valve Replacement Parts: Pilot Valve	p. 232

Manifold




How to Order Manifolds	
How to Order Valves	p. 235
Dimensions: Lead Wire Type	p. 236
Electrical Wiring Specifications	····· p. 237
Dimensions: Fieldbus Type (IO-Link)	p. 238
Dimensions: 5-Port Type Manifold Block [Common to Lead Wire Type/Fieldbus Type (IO-Link)]	····· p. 239
Dimensions: Panel Cutout Dimensions	
Dimensions: External Pilot (Made to Order)	····· p. 241

p. 242

Sub-plate

Sub-plate (Single Unit) [IP69K Compliant]

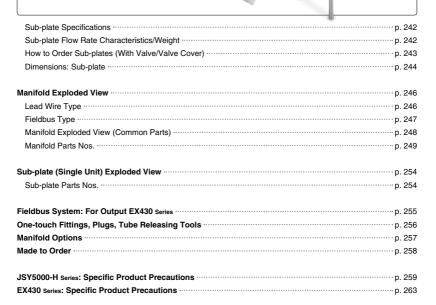

JSY5000-H Series Valve Specifications

Valve Specifications (JSY5000-H Plug-in Type)

Valve type			Bubber seal	
Fluid			Air	
	2-position single		0.15 to 0.7	
Internal pilot	2-position double		0.1 to 0.7	
operating pressure range MPa	3-position		0.2 to 0.7	
мра	4-position dual	3-port valve	0.15 to 0.7	
External pilot	Operating pres	sure range	-100 kPa to 0.7	
(Made to order)		2-position single		
operating pressure range	Pilot pressure	2-position double	0.25 to 0.7	
MPa	range	3-position		
Ambient and fluid temperatures*1 °C			-10 to 50 (No freezing)	
Max. operating frequency Hz	JSY5000	2-position single/double	5	
		4-position dual 3-port valve	3	
		3-position	3	
Manual override			Non-locking push type	
Pilot exhaust type	Internal pilot		Common exhaust	
Filot exhaust type	External pilot (Made to order)		Common exhaust	
Lubrication			Not required	
Mounting orientation*2			Unrestricted	
Impact/Vibration resistance	e*2 m/s²		150/30	
Coil rated voltage DC			24 V	
Allowable voltage fluctuation V			$\pm 10\%$ of the rated voltage	
Power consumption W	Standard		0.4	
	With power-sav	ring circuit	0.1*3 [Inrush 0.4, Holding 0.1]	
Surge voltage suppressor			Diode (Varistor for non-polar type)	
Indicator light			LED	

*1 The product is IPX9K compliant (protected against high-pressure hot water). However, operation of the valve must be within the specified valve ambient temperature and fluid temperature range.

*2 Impact resistance: The value at which no malfunction occurs when tested in the axial direction and at right angles to the main value and the armature in both energized and de-energized states, once for each condition (Values from the initial stage)

Vibration resistance: The value at which no malfunction occurs in a one-sweep test between 45 and 2000 Hz, performed in both energized and deenergized states in the axial direction and at right angles to the main valve and the armature (Values from the initial stage)

*3 For details, refer to page 260.

JSY5000-H Series

Manifold Specifications

Туре			Lead wire	Fieldbus (IO-Link)*1
Manifo	old type		Plug-in connector connecting base	
SUP/E	XH port type		Common SUP/EXH	
Valve	stations		2 to 16 st	ations
Internal wiring			Positive common Negative common (Refer to "Electrical Wiring Specifications" on page 237.)	Negative common
	SUP/EXH block 1(P), 5(EA), 3(EB) port		G1/2 (Based on ISO 16030)	
Port size	2-port type manifold block	4(A), 2(B) port	G1/4 (Based on ISO 16030)	
3120	5-port type manifold block	1(P), 4(A), 2(B), 5(EA), 3(EB) port	G1/4 (Based on ISO 16030)	
Enclosure		IP69K (Based on IEC/EN 60529/ISO 20653)		
External parts material			Resin parts: PA, Metal parts: Stainless steel 316, Rubber parts: EPDM	

*1 Refer to page 255 for the Fieldbus type for output (EX430 series) specifications.

Manifold Flow Rate Characteristics

	Port size		Flow rate characteristics			
Manifold block type	1, 5, 3 4, 2 (P, EA, EB) (A, B)	4, 2	1 → 4, 2 ($P \rightarrow A, B)$	4, 2 → 5, 3(A,	$B\toEA,EB)$
type		C [dm3/(s·bar)]	b	C [dm3/(s·bar)]	b	
2-port type	G1/2	G1/4	6.80	0.31	7.64	0.23
5-port type	G	/4	5.60	0.21	5.67	0.22

* The flow rate characteristics values are for an individually operated 2-position type manifold base with 5 stations.

Manifold Weight

Manifold block type (2-port/5-port type)	Weight: g*1 (n: Number of stations)
Lead wire type	227 n + 1070
Fieldbus type	227 n + 500

*1 Weight without fittings. For when a lead wire type cable is 5 m. Add the weight of the valves to be mounted from the table below to find the total weight.

Valve Weight

Valve model	Type of actuation		Weight [g]
	2-position	Single	86
		Double	96
JSY5⊡03-H	3-position	Closed center	
		Exhaust center	106
		Pressure center	
	4-position	Dual 3-port	92

Response Time

Malers and all	Response time [ms]*1		
Valve model	Z type	U type	
JSY5103-H	40	32	
JSY5203-H	19	19	
JSY53/4/503-H	46	44	
JSY5A/B/C03-H	38*2	29* ²	


*1 Based on dynamic performance test, JIS B 8419:2010 (Coil temperature: 20°C, at rated voltage)

*2 There will be an approx. 10 ms delay on the 2(B) port side due to the length of the pilot passage.

Connector Wiring Layout

For both Fieldbus and lead wire types, additional valves are sequentially assigned pins on the connector. This makes it completely unnecessary to disassemble the connector unit.

■ Single solenoid valve is installed to all double wiring. (Double wiring specification) (Manifold specification sheet is not necessary.)

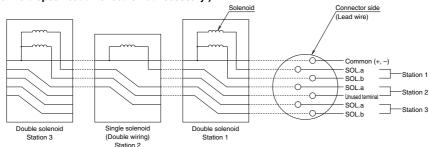


@SMC

* These diagrams are for the purpose of explanation, and differ from the actual connector wiring.


JSY5000-H Series Valve Construction


Rubber Seal

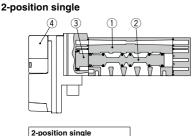



3-position closed center/exhaust center/pressure center

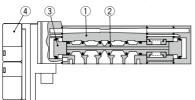


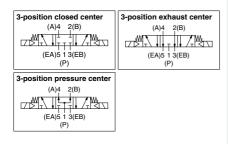


Component Parts

No.	Description	Material
1	Body	Aluminum die-casted
2	Spool valve	Aluminum/HNBR (4-position dual 3-port:) Resin/HNBR
3	Piston	Resin
4	Pilot valve	—


2-position double

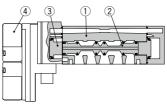


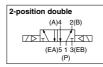

4-position dual 3-port


SMC

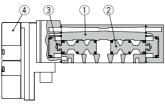

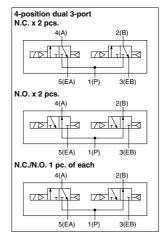

JSY5000-H Series Valve Replacement Parts: Pilot Valve

How to Order Pilot Valves (With a gasket and two mounting screws)

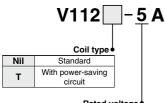


Rated voltage524 VDC

▲Caution

- The coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve.
- When selecting the standard coil type, it is not possible to change to the power-saving circuit type.



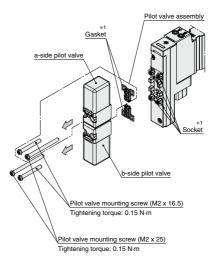


- Remove the pilot valve mounting screws.
- Remove the pilot valve in the direction indicated by the arrow.
- *1 Ensure the gasket is mounted, and take care not to bend the socket.
- * Assemble by following the removal procedure in reverse.



Clean Design Manifold Valve JSY5000-H Series [IP69K Compliant]

This is an IP69K compliant Caution product. The manifold and valves are ordered as a set.

How to Order Manifolds

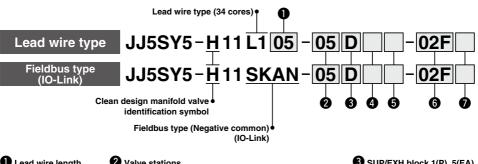

Lead wire length

Symbol	Length
05	5 m
10	10 m
15	15 m

2 Valve stations

	Symbol	Stations	Note	1
ſ	02	2 stations		
ſ	:	:	Double wiring*1	
ſ	16	16 stations		

1 Valve stations number includes stations with a blanking plate, and is the total number for all 2-port and 5-port type manifold blocks.

SUP/EXH block 1(P), 5(EA), 3(EB) port entry

D D side (2 to 10 stations)		
В	Both sides (2 to 16 stations)	
CLID/EVI blocks with side only is not		

SUP/EXH blocks with U side only is not available

Pilot type

Nil	Internal pilot
R *1	External pilot

*1 External pilot port is on the D side end block

The external pilot specification should be ordered as made to order.

5-port type manifold block stations

Symbol	Stations	Note								
Nil	None	Specify the number of stations with 5-port type manifold blocks,								
01	1 station	so this will be equal to or less than the total number of valve								
:	:	stations. Specify the arrangement and blocking disk mounting								
16	16 stations	position in the manifold specification sheet.								
* E #))	E a \ When the symbol is "00". O stations are E part type manifold blocks									

E.g.) When the symbol is "02", 2 stations are 5-port type manifold blocks

When the symbol is Nil or blank, all stations are of 2-port type manifold block. * When different pressures are required, use 5-port type manifold blocks with blocking disks. Use of 5-port type manifold blocks without blocking disks can be used to provide an intermediate SUP/EXH block function.

6 Manifold block port size [Thread piping/One-touch fitting (Metric/Inch size)]

			Manifold	block port		Note			
			si	ze	SUP/EXH block	D side e	nd block		
Symbol	Fitting specifica	tions	2-port type	5-port type					
Symbol	Fitting specifica	alloris	A, B port	P, A, B, EA, EB port	P, EA, EB port	X, PE*2 port	VENT port		
02F	Without fitting		G1/4 Thread piping		G1/2 Thread piping	G1/8 Thread piping	M5 Thread piping		
B8		Brass	ø8*1						
B10	Metric size Threaded	fitting	ø10		ø16	ø6	ø4* ³		
G8	One-touch fitting	Stainless	ø8*1		010	00			
G10	g	steel fitting	~	ø10					
BN9		Brass	ø5/1	6"*1					
BN11	Inch size Threaded	fitting		/8"	ø1/2"	ø1/4"	ø5/32"* ³		
GN9	One-touch fitting	Stainless	ø5/16"*1		2/10	1/4	00/02		
GN11	5	steel fitting	ø3/8"						

Mounting option

Nil	None									
L*1	Мог	unting leg	1 0e)	nm)						

Mounting legs are shipped together with the product.

Made to Order	Made to Order (Refer to page 258 for details.)
	Specifications
	External pilot

*1 ø8 and ø5/16" One-touch fitting are common for mm and inch size.

*2 In the case of external pilot type (made to order), fittings are attached to the X and PE ports according to the above fitting type.

*3 For the VENT port ø4 and ø5/32", the same fitting is used.



Clean Design Manifold Valve JSY5000-H Series



How to Order Valves

JSY5103-5U-H Clean design manifold valve

Type of actuation

1	2-position	Single					
2	2-00510011	Double					
3		Closed center					
4	3-position	Exhaust center					
5		Pressure center					
A *1		N.C./N.C.					
B *1	4-position dual 3-port	N.O./N.O.					
C *1	uuui o port	N.C./N.O.					

*1 External pilot specification is not applicable for 4-position dual 3-port valves.

2 Coil specifications

Nil	Standard
т	With power-saving circuit (Continuous duty type)

identification symbol

* Be careful of the energizing time when the power-saving circuit is selected. For details, refer to page 260.



Made to Order

(Refer to page 258 for details.) Specifications External pilot

3 Light/surge voltage suppressor

Symbol	With light	Surge voltage suppressor	Common specification		
U			Non-polar		
z	٠	•	Polar Positive common		
NZ			Polar Negative common		

 Only "Z" and "NZ" types are available with a powersaving circuit.

 For fieldbus type manifold, select non-polar (U) or negative common (NZ).


Protective class

class II (Mark: (1)

▲ Caution

 If the product is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.

How to Order Manifold Assembly

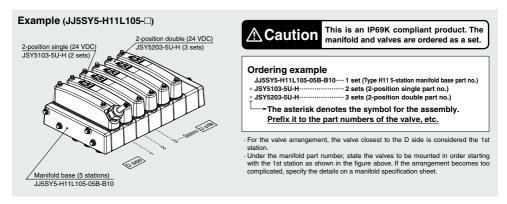


Manifold Specifications

If the arrangement becomes too complicated, or for arrangements including 5-port type manifold blocks, please use the manifold specification sheet.



Scan here to download.

JSY5000-H Series

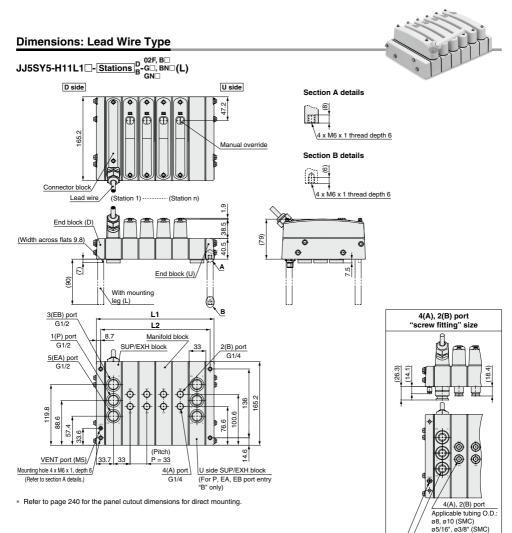

1(P), 5(EA), 3(EB) Port Entry: D Side (SUP/EXH Block) L: Dimensions n: Number of stations

L _r	2	3	4	5	6	7	8	9	10
L1	133.4	166.4	199.4	232.4	265.4	298.4	331.4	364.4	397.4
L2	117	150	183	216	249	282	315	348	381

1(P), 5(EA), 3(EB) Port Entry: Both Sides (SUP/EXH Block) L: Dimensions

L: Din	L: Dimensions n: Number of stations														
_ ∟	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	166.4	199.4	232.4	265.4	298.4	331.4	364.4	397.4	430.4	463.4	496.4	529.4	562.4	595.4	628.4
L2	150	183	216	249	282	315	348	381	414	447	480	513	546	579	612

/ 1(P), 5(EA), 3(EB) port Applicable tubing O.D.: ø16 (SMC)

/ VENT port Applicable tubing O.D.: ø4 (SMC)

These figures show the "JJ5SY5-

H11L105-04B-B10."

*


ø1/2" (SMC)

ø5/32" (SMC)



Clean Design Manifold Valve JSY5000-H Series

Electrical Wiring Specifications

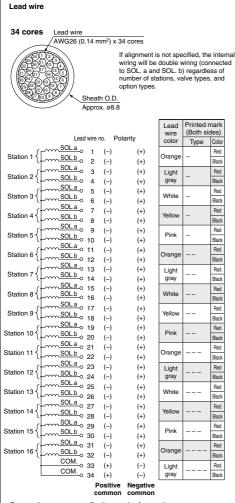


 For negative common specification, a valve for negative common or a valve without polarity should be used.

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	143 or less
Voltage limit V, 1 minute, AC	2000
Insulation resistance MΩ/km, 20°C	10 or more

 Cannot be used for movable wiring The minimum bending radius of the cable is 55 mm.

JSY5000-H Series

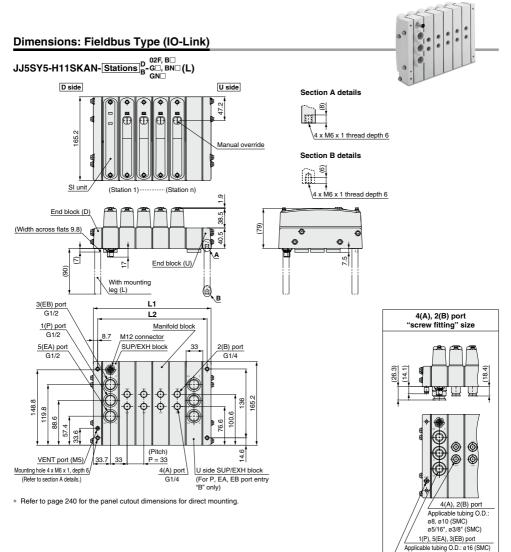

1(P), 5(EA), 3(EB) Port Entry: D Side (SUP/EXH Block) L: Dimensions n: Number of stations

L _ n	2 3		4	5	5 6 7		8	9	10			
L1	133.4	166.4	199.4	232.4	265.4	298.4	331.4	364.4	397.4			
L2	117	150	183	216	249	282	315	348	381			

1(P), 5(EA), 3(EB) Port Entry: Both Sides (SUP/EXH Block) L: Dimensions

L: Din	L: Dimensions n: Number of stations														
_ ∟	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	166.4	199.4	232.4	265.4	298.4	331.4	364.4	397.4	430.4	463.4	496.4	529.4	562.4	595.4	628.4
L2	150	183	216	249	282	315	348	381	414	447	480	513	546	579	612

ø1/2" (SMC)


ø5/32" (SMC)

/ VENT port Applicable tubing O.D.: ø4 (SMC)

 These figures show the "JJ5SY5-H11SKAN-04B-B10."



Clean Design Manifold Valve JSY5000-H Series

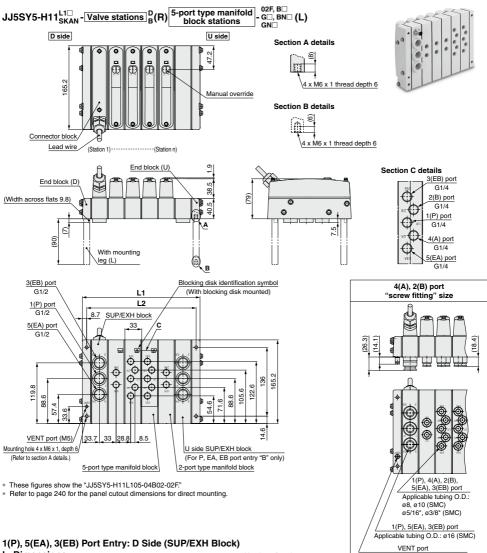

Dimensions: 5-Port Type Manifold Block [Common to Lead Wire Type/Fieldbus Type (IO-Link)]

1(P), 5(EA), 3(EB) Port Entry: D Side (SUP/EXH Block) L: Dimensions n: Number of stations n: Number of stations

L _ n	2	3	4	5	6	7	8	9	10
L1	133.4	166.4	199.4	232.4	265.4	298.4	331.4	364.4	397.4
L2	117	150	183	216	249	282	315	348	381

1(P), 5(EA), 3(EB) Port Entry: Both Sides (SUP/EXH Block) L: Dimensions


L: Dimensions n: Number of sta											of stations				
ľ_	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	166.4	199.4	232.4	265.4	298.4	331.4	364.4	397.4	430.4	463.4	496.4	529.4	562.4	595.4	628.4
L2	150	183	216	249	282	315	348	381	414	447	480	513	546	579	612

Applicable tubing O.D.: ø4 (SMC)

ø5/32" (SMC)

JSY5000-H Series

Dimensions: Panel Cutout Dimensions

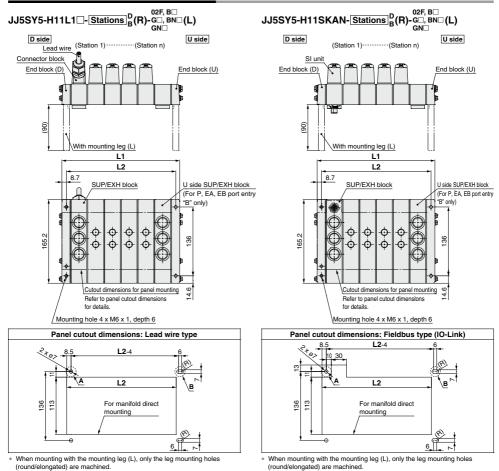

Section A mounting hole details Section B mounting hole details



* Tolerance: ±0.2

1(P), 5(EA), 3(EB) Port Entry: D Side (SUP/EXH Block) L: Dimensions n: Number of stations


E. D	10110101							reamber	of offations
L _r	2	3	4	5	6	7	8	9	10
L1	133.4	166.4	199.4	232.4	265.4	298.4	331.4	364.4	397.4
L2	117	150	183	216	249	282	315	348	381

1(P), 5(EA), 3(EB) Port Entry: Both Sides (SUP/EXH Block) L: Dimensions

L. DIII	lensio	15											n:	Number	of stations
r L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	166.4	199.4	232.4	265.4	298.4	331.4	364.4	397.4	430.4	463.4	496.4	529.4	562.4	595.4	628.4
L2	150	183	216	249	282	315	348	381	414	447	480	513	546	579	612

Niccords and address



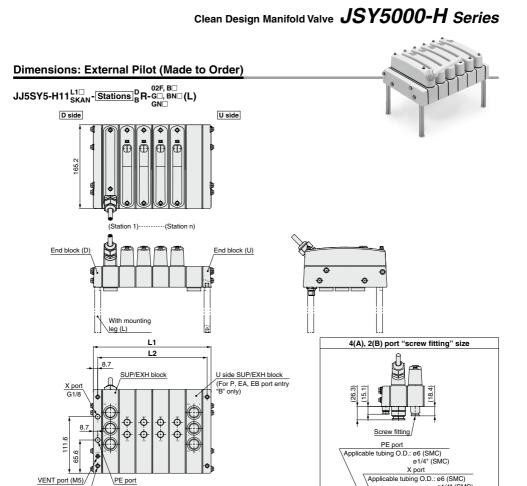

VENT port (M5) Mounting hole 4 x M6 x 1, depth 6,

(Refer to section A details.)

* Refer to page 240 for panel cutout dimensions.

* These figures show the "JJ5SY5-H11L105-04BR-B10."

VENT port Applicable tubing O.D.: ø4 (SMC)

ø1/4" (SMC)

ø5/32" (SMC)

1(P), 5(EA), 3(EB) Port Entry: D Side (SUP	/EXH Block)
L: Dimensions	n: Number of stations

G1/8

L _ r	2	3	4	5	6	7	8	9	10
L1	133.4	166.4	199.4	232.4	265.4	298.4	331.4	364.4	397.4
L2	117	150	183	216	249	282	315	348	381

1(P), 5(EA), 3(EB) Port Entry: Both Sides (SUP/EXH Block) I · Dimensions

L: Dimensions n: Number of s											of stations				
_ ۲	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	166.4	199.4	232.4	265.4	298.4	331.4	364.4	397.4	430.4	463.4	496.4	529.4	562.4	595.4	628.4
L2	150	183	216	249	282	315	348	381	414	447	480	513	546	579	612



Sub-plate Specifications

	Туре	Plug-in single unit type with M12 plug connector
SUP/EXH po		1(P), 5, 3(EA, EB) individual port
Internal wiri	ng	Positive common Negative common (Refer to the pin arrangement on page 243.)
Port size	1(P), 5/3(EA/EB)	G1/4 (Based on ISO 16030)
FOILSIZE	4(A), 2(B)	G 1/4 (Dased 01100 10000)
Enclosure		IP69K (Based on IEC/EN 60529/ISO 20653)
External par	ts material	Resin parts: PA, Metal parts: Stainless steel 316, Rubber parts: EPDM


Sub-plate Flow Rate Characteristics/Weight

Port :	size	FI				
1, 5, 3	4, 2	$1 \rightarrow 4, 2 (P \rightarrow$	· A, B)	4, 2 → 5, 3 (A, B -	→ EA, EB)	Weight: g*1
(P, EA, EB)	(A, B)	C [dm ³ /(s·bar)]	b	C [dm ³ /(s·bar)]	b	
G1/4	G1/4	6.75	0.31	6.53	0.22	180

*1 Weight without fittings, valve, and M12 cable. Valve weight can be added from page 230.

Sub-plate [IP69K Compliant] JSY5000-H Series

How to Order Sub-plates (With Valve/Valve Cover)

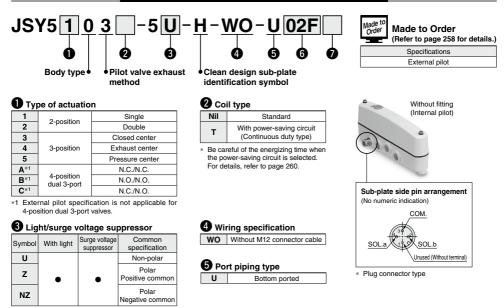

Only "Z" and "NZ" types are available with a power-saving circuit.

6 1(P), 4(A), 2(B), 5(EA), 3(EB) port size [Thread piping/One-touch fitting (Metric/Inch size)]

			P, A, B, EA, EB port	No	ote
Symbol	Fitting specifications		One-touch fitting size	X, PE ^{*2} port	VENT port
02F	Without fi	tting	G1/4 Thread piping	M5 Thread piping	M5 Thread piping
B8		Brass fitting	ø8*1		
B10	Metric size Threaded	brass mung	ø10	ø4	ø4* ³
G8	One-touch fitting	Stainless	ø8*1	04	
G10		steel fitting	ø10		
BN9		Brass fitting	ø5/16"*1		
BN11	Inch size Threaded	brass illung	ø3/8"	ø5/32"	ø5/32"* ³
GN9	One-touch fitting	Stainless	ø5/16"* ¹	00/32	00/32 -
GN11		steel fitting	ø3/8"		

*1 For B8/G8 (ø8) and BN9/GN9 (ø5/16"), the same fitting is used for them.

*2 In the case of external pilot type, fittings are attached to the X and PE ports according to the above fitting type.

*3 For X, PE port and VENT port of ø4 and ø5/32", the same fitting is used.

A Caution If the product is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.

7 Mounting option

None

Mounting leg (90 mm) *1 Mounting legs are shipped together with the product.

Nil

*1

Recommended M12 Connector Cables (IP69K and FDA-compliant products)




Cable length	PHOENIX CONTACT Product no.	PHOENIX CONTACT Order no.	Note
1.5 m	SAC-4P-1,5-600/M12FS HD	1403956	
3 m	SAC-4P-3,0-600/M12FS HD	1403957	Produced upon
5 m	SAC-4P-5,0-600/M12FS HD	1403958	receipt of order
10 m	SAC-4P-10,0-600/M12FS HD	1403959	

Order the Phoenix Contact products from the manufac-**∧** Caution turer or the distributors.



JSY5000-H Series

Dimensions: Sub-plate

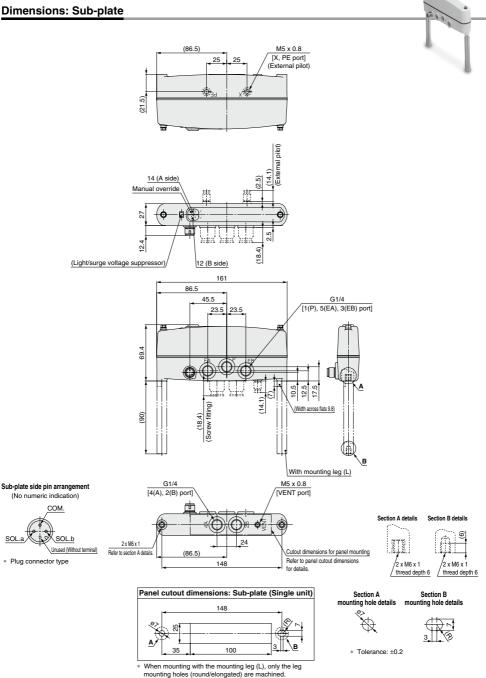


SMC


SOL.a



JSY5000-H Series Manifold Exploded View

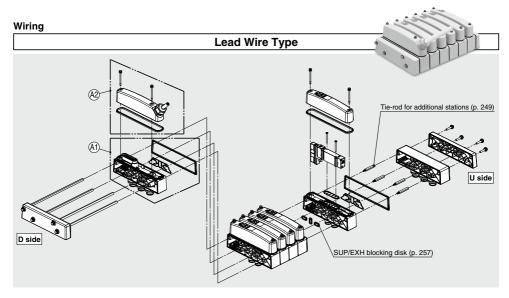

Manifold Parts Nos.

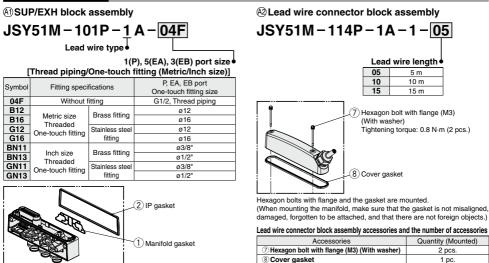

Gaskets are mounted.

(When mounting the manifold, make sure that the gasket is not misaligned, damaged, forgotten to be attached, and that there are not foreign objects.)

SUP/EXH block assembly accessories and the number of accessories

Accessories	Quantity (Mounted)
① Manifold gasket	1 pc.
② IP gasket	1 pc.


* Refer to page 249 for ordering single unit.

246



Refer to page 249 for ordering single unit.

Manifold Exploded View JSY5000-H Series

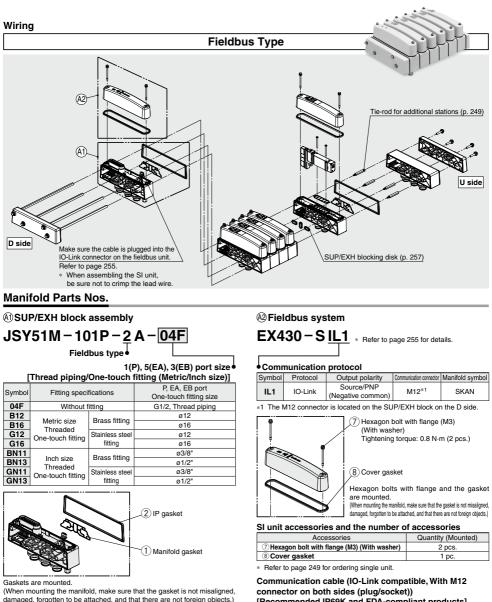

SUP/EXH block assembly accessories and the number of accessories

Accessories	Quantity (Mounted)
1 Manifold gasket	1 pc.
② IP gasket	1 pc.

* Refer to page 249 for ordering single unit.


nded ID60K and [Dee

[Recommended	IP69K and FDA-	-compliant	: products]


Cable	PHOENIX CONTACT	PHOENIX CONTACT	Note
length	Product no.	Order no.	Note
1.5 m	SAC-5P-M12MS/1,5-600/M12FS HD	1404065	Produced
3 m	SAC-5P-M12MS/3,0-600/M12FS HD	1404066	upon
5 m	SAC-5P-M12MS/5,0-600/M12FS HD	1413144	receipt of
10 m	SAC-5P-M12MS/10,0-600/M12FS HD	1413143	order


Caution Order the Provents Contact, the manufacturer or the distributors. Order the Phoenix Contact products from

JSY5000-H Series

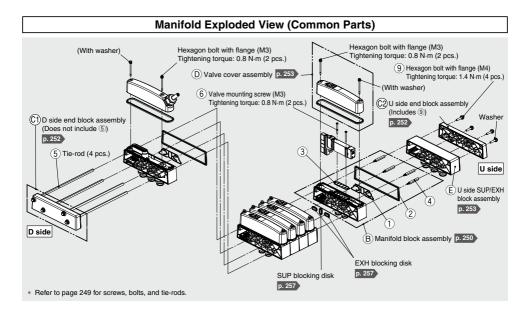

How to Increase Manifolds

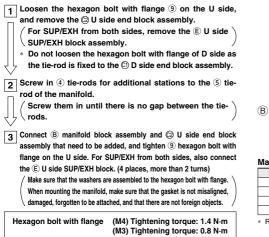

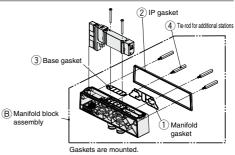

Manifold block assembly

No.	Description	Quantity
1	Manifold gasket	1 pc. (Mounted)
2	IP gasket	1 pc. (Mounted)
3	Base gasket	1 pc. (Mounted)
(4)	Tie-rod for additional stations	4 pcs. (Included)

Refer to page 249 for ordering single unit.

A Caution

- 1. Be sure to shut off the power and air supplies before disassembly.
- Furthermore, since air may remain inside the actuator, piping, and manifold, confirm that the air is completely exhausted before performing any work.
- 2. When disassembly and assembly are performed, air leakage may result if the tightening of the hexagon bolt with flange is inadequate.
- 3. Rubber parts are attached to the metal parts of the washer. If they are misaligned or dislodged, return them to their normal position.




Manifold Parts Nos.

No.	D	Description	Part no.	Note
1		Manifold gasket	JSY51M-109P-1A	For 10 valves (10 pcs.)
2	Manifold	IP gasket	JSY51M-109P-3A	For 10 valves (10 pcs.)
3	block assembly	Base gasket	JSY51M-9P-1A	For 10 valves (10 pcs.)
(4)		Tie-rod for additional stations	JSY51M-49P-2A	For 1 station (4 pcs.)
5	Tie-rod		JSY51M-49P-1-⊡A	Refer to the table below for the number of □. 4 tie-rods per manifold
6	Valve mounting screw		JSY51V-23-1A (M3 x 29)	For 10 valves (20 pcs.)
7	Hexagon bolt with flang (For connector block/SI	je (M3) (With washer) unit cover/valve cover)	JSY51M-123P-1A (M3 x 40)	For 5 valves (10 pcs.)
8	Cover gasket (For connector block/SI	unit cover/valve cover)	JSY51M-109P-2A	For 10 valves (10 pcs.)
9	Hexagon bolt with flang (For end block)	ge (M4) (With washer)	JSY51M-123P-2A (M4 x 24)	8 bolts per manifold

Tie-rod Order Nos. (1 set includes 4 pcs.)

Manifold	Tie-rod	part no.
stations	SUP/EXH block assembly: D side	SUP/EXH block assembly: B (Both sides)
2	JSY51M-49P-1-2A	JSY51M-49P-1-3A
3	JSY51M-49P-1-3A	JSY51M-49P-1-4A
4	JSY51M-49P-1-4A	JSY51M-49P-1-5A
5	JSY51M-49P-1-5A	JSY51M-49P-1-6A
6	JSY51M-49P-1-6A	JSY51M-49P-1-7A
7	JSY51M-49P-1-7A	JSY51M-49P-1-8A
8	JSY51M-49P-1-8A	JSY51M-49P-1-9A
9	JSY51M-49P-1-9A	JSY51M-49P-1-10A
10	JSY51M-49P-1-10A	JSY51M-49P-1-11A
11		JSY51M-49P-1-12A
12		JSY51M-49P-1-13A
13	For a manifold of 11 or more stations, only the SUP/EXH block assembly: B (Both sides) can be selected.	JSY51M-49P-1-14A
14		JSY51M-49P-1-15A
15	(Doin sides) can be selected.	JSY51M-49P-1-16A
16		JSY51M-49P-1-17A


Mounting leg (4 pcs./set): For manifold JSY51M-115P-1A

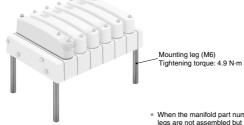

* When the manifold part number (L) is ordered, the mounting legs are not assembled but included in the same package.

JSY5000-H Series


Manifold Parts Nos.

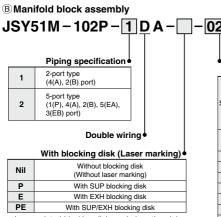

10E			0	
		2-р	ort type 2-po	rt / 5-port types mixed
	fold block port si ad piping/One-to		Metric/Inch siz	ze)]
				old block rt size
Symbol	Fitting specifi	cations	2-port type	5-port type
			A, B port	P, A, B, EA, EB port
02F	Without fi	tting	-	a1/4 ad piping
B8		Brass fitting	e	18*1
B10	Metric size Threaded	Blass Itung	5	ə10
G8	One-touch fitting	Stainless	e	18*1
G10		steel fitting		ə10
BN9	la ale alea	Brass fitting	ø5	/16"*1
BN11	Inch size Threaded	Diass inting		3/8"
GN9	One-touch fitting	Stainless	ø5	/16"*1
GN11	l	steel fitting	Ø	3/8"

Laser printed blocking disk symbol on the piping surface of the fitting of A and B port. For blocking disks, refer to "Manifold Options" on page 257.

*1 ø8 and ø5/16" One-touch fitting are common for mm and inch size.

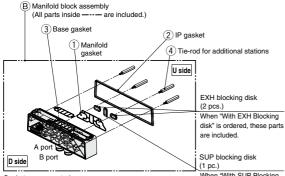

Gaskets are mounted.

(When mounting the manifold, make sure that the gasket is not misaligned, damaged, forgotten to be attached, and that there are not foreign objects.)

When "With SUP Blocking


disk" is ordered, these parts are included

Manifold block assembly accessories and the number of accessories

Accessories	Quantity
1 Manifold gasket	1 pc. (Mounted)
② IP gasket	1 pc. (Mounted)
3 Base gasket	1 pc. (Mounted)
(4) Tie-rod for additional stations	4 pcs. (Included)


* Refer to page 249 for ordering single unit.

Manifold Parts Nos.

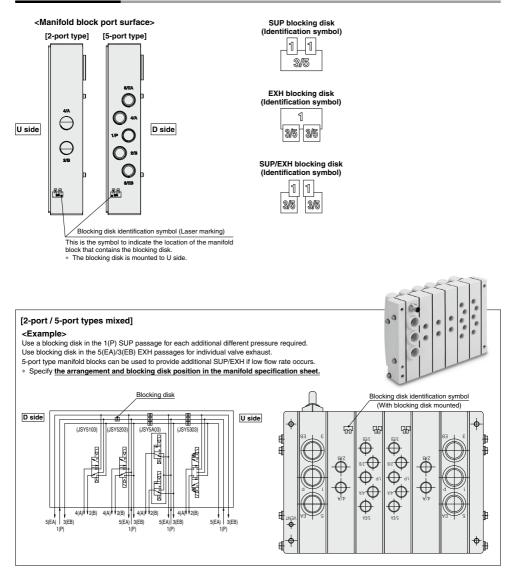

JSY5000-H Series

Manifold Parts Nos.

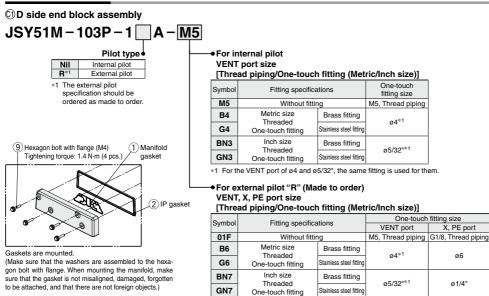

*1 For the VENT port of ø4 and ø5/32", the same fitting is used for them.

D side end block assembly accessories and the number of accessories

Accessories	Quantity
1 Manifold gasket	1 pc. (Mounted)
② IP gasket	1 pc. (Mounted)
9 Hexagon bolt with flange (M4) (With washer)	4 pcs. (Included)

* Refer to page 249 for ordering single unit.

©U side end block assembly JSY51M - 103P - 2A

0

000

VENT port (M5)

(Common to internal/external pilot)

D side end block port location


0

0

PE port (G1/8)

(External pilot only)

O

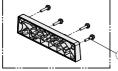

(9) Hexagon bolt with flange (M4) Tightening torque: 1.4 N·m (4 pcs.)

X port (G1/8)


U side end block assembly accessories and the number of accessories


Accessories	Quantity (Included)
9 Hexagon bolt with flange (M4) (With washer)	4 pcs.
* Refer to page 249 for ordering single unit	

Refer to page 249 for ordering single unit.

Manifold Exploded View JSY5000-H Series


Manifold Parts Nos.

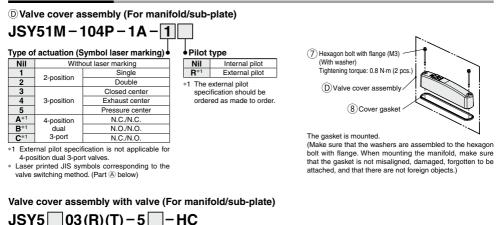

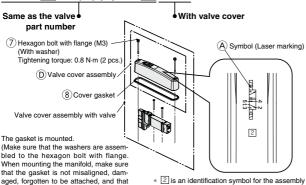

aged, forgotten to be attached, and that there are not foreign objects.)

(E) U side SUP/EXH block assembly JSY51M-101P-3A-04F

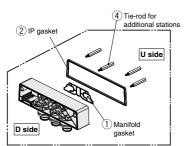

Gaskets are mounted

(When mounting the manifold, make sure that the gasket is not misaligned, damaged, forgotten to be attached, and that there are not foreign objects.)

1(P), 5(EA), 3(EB) port size [Thread piping/One-touch fitting (Metric/Inch size)]

Symbol	Fitting specifications		P, EA, EB port One-touch fitting size
04F	Without fitting		G1/2, Thread piping
B12		Drace fitting	ø12
B16	Metric size	Brass fitting	ø16
G12	Threaded One-touch fitting	Stainless steel	ø12
G16		fitting	ø16
BN11		Brass fitting	ø3/8"
BN13	Inch size	Diass inting	ø1/2"
GN11	Threaded One-touch fitting	Stainless steel	ø3/8"
GN13		fitting	ø1/2"

U side SUP/EXH block assembly accessories and the number of accessories

Accessories	Quantity
① Manifold gasket	1 pc. (Mounted)
② IP gasket	1 pc. (Mounted)
4 Tie-rod for additional stations	4 pcs. (Included)

* Refer to page 249 for ordering single unit.


for the production department of SMC.

Valve cover assembly/ Valve cover assembly with valve accessories and the number of accessories

Accessories	Quantity (Mounted)	
 Hexagon bolt with flange (M3) (With washer) 	2 pcs.	
8 Cover gasket	1 pc.	

* Refer to page 249 for ordering single unit.

JSY5000-H Series Sub-plate (Single Unit) Exploded View

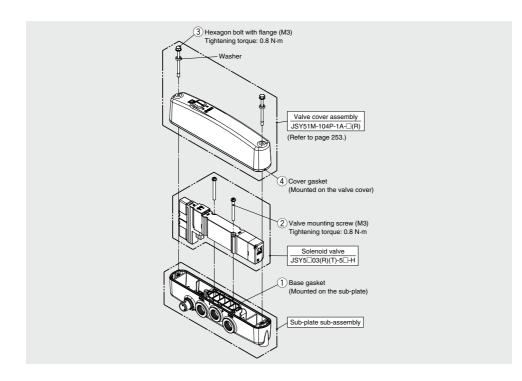

Sub-plate Parts Nos.

No.	Description	Part no.	Note
1	Base gasket	JSY51M-9P-1A	For 10 valves (10 pcs.)
2	Valve mounting screw	JSY51V-23-1A (M3 x 29)	For 10 valves (20 pcs.)
3	Hexagon bolt with flange (M3) (With washer) (For valve cover)	JSY51M-123P-1A (M3 x 40)	For 5 valves (10 pcs.)
4	Cover gasket (For valve cover)	JSY51M-109P-2A	For 10 valves (10 pcs.)

Mounting leg (2 pcs./set): For sub-plate



Fieldbus System: For Output **EX430** Series

EX430-SIL1



How to Order SI Units

EX430



Communication protocol

Symbol	Protocol	Output polarity	Communication connector	Manifold symbol
IL1	IL1 IO-Link Source/PNP (Negative common) M12*1 SKAN			

*1 The M12 connector is located on the SUP/EXH block on the manifold D side.

Specifications

Model		EX430-SIL1
Annlinghia	Protocol	IO-Link (Class B)
Applicable system	Version	V1.1
system	Configuration file*1	IODD file
I/O occupation a	area (Inputs/Outputs)	0/32, 16/32*2
Communication	n speed	COM3/COM2*2
Communication co	nnector specification	M12* ³
Power supply	Power supply voltage	18 to 30 VDC
for control	Internal current consumption	50 mA or less
Power supply for output	Power supply voltage	22.8 to 26.4 VDC
	Output type	Source/PNP (Negative common)
	Number of outputs	32
Output	Load	Solenoid valve with surge voltage suppressor of 24 VDC, 0.4 W or less (SMC)
	Supplied voltage	24 VDC
	Supplied current	Max. 0.54 A
	Operating temperature range	-10 to 50°C
Environmental	Operating humidity range	35% to 85% RH (No condensation)
resistance	Withstand voltage	500 VAC for 1 minute between terminals and housing
	Insulation resistance	10 $\mbox{M}\Omega$ or more (500 VDC measured via megohmmeter) between terminals and housin
Standards		CE/UKCA marking (EMC directive/RoHS directive)
Weight 100 g		100 g

Y Branch Connector for IO-Link

This connector is used to supply power to the valve manifold by branching the IO-Link communication cable in cases where a port class A IO-Link master is used.


This branch connecter has an IP67 enclosure.

For details, refer to page 1331.



*2 A selection can be made using the setting switch.
 *3 The M12 connector is located on the SUP/EXH block on the manifold D side.

Dimensions

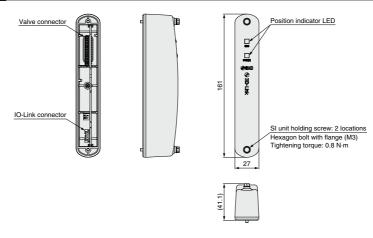

JSY5000-H series One-touch Fittings, Plugs, Tube Releasing Tools

■ FDA Compliant Metal One-touch Fittings Hexagon Socket Head Male Connector

	Port size			Brass C3604 (Electroless nickel plating)	Stainless steel 316	
		2-port type: 4(A), 2(B) port	ø8*1	KQB2S08-G02-F	KQG2S08-G02-F	
	size	Manifold block	5-port type: 1(P), 4(A), 2(B), 5(EA), 3(EB) port	ø10	KQB2S10-G02-F	KQG2S10-G02-F
		SUP/EXH block	1(D) 5(EA) 2(ED) post	ø12	KQB2S12-G04-F	KQG2S12-G04-F
	Metric	SUP/EAH DIOCK	P/EXH block 1(P), 5(EA), 3(EB) port 012	ø16	KQB2S16-G04-F	KQG2S16-G04-F
	D side end block		VENT port	ø4*2	KQB2S04-M5-F	KQG2S04-M5-F
		D side end block	X, PE port	ø6	KQB2S06-G01-F	KQG2S06-G01-F
	Manifold block	2-port type: 4(A), 2(B) port 5-port type: 1(P), 4(A), 2(B),	ø5/16"*1	KQB2S08-G02-F	KQG2S08-G02-F	
		5(EA), 3(EB) port \$\$	KQB2S11-G02-F-X73	KQG2S11-G02-F-X73		
	SUP/EXH block	SUP/EXH block 1(P), 5(EA), 3(EB) port 03/8" 01/2"	ø3/8"	KQB2S11-G04-F-X73	KQG2S11-G04-F-X73	
			KQB2S13-G04-F-X73	KQG2S13-G04-F-X73		
		D side end block	VENT port	ø5/32"*2	KQB2S04-M5-F	KQG2S04-M5-F
	D side end block	X, PE port	ø1/4"	KQB2S07-G01-F-X73	KQG2S07-G01-F-X73	



Metal One-touch fitting

*1 For the 4(A) and 2(B) port of ø8 or ø5/16", the same fitting is used for them.

*2 For the VENT port of ø4 and ø5/32", the same fitting is used for them.

FDA Compliant Metal Plugs

When the plug is used, use it with a One-touch fitting.

	Port size			Brass C3604 (Electroless nickel plating)	Stainless steel 316	
	2-port type: 4(A), 2(B) po Manifold block 5-port type: 1(P), 4(A), 2(B)		ø8*1	KQB2P-08-F	KQG2P-08	
size	Maniloid Diock	5-port type: 1(P), 4(A), 2(B), 5(EA), 3(EB) port	ø10	KQB2P-10-F	KQG2P-10	
	SUP/EXH block	1(P), 5(EA), 3(EB) port	ø12	KQB2P-12-F	KQG2P-12	
Metric	SUP/EAH DIOCK	I(P), 5(EA), 5(EB) port	ø16	KQB2P-16-F	KQG2P-16	
	D aida and black	VENT port	ø4*2	KQB2P-04-F	KQG2P-04	
	D side end block	D side end block	X, PE port	ø6	KQB2P-06-F	KQG2P-06
	Manifold block	2-port type: 4(A), 2(B) port 5-port type: 1(P), 4(A), 2(B),	ø5/16"*1	KQB2P-08-F	KQG2P-08	
size		5(EA), 3(EB) port	ø3/8"	KQB2P-11-F	KQG2P-11	
	SUP/EXH block	SUP/EXH block 1(P), 5(EA), 3(EB) port 03/8" 01/2"	ø3/8"	KQB2P-11-F	KQG2P-11	
2			KQB2P-13-F	KQG2P-13		
	Divide and block VENT port		ø5/32"* ²	KQB2P-04-F	KQG2P-04	
	D side end block	X, PE port	ø1/4"	KQB2P-07-F	KQG2P-07	



Metal plug

*1 For the 4(A) and 2(B) port of ø8 or ø5/16", the same fitting is used for them.

*2 For the VENT port of ø4 and ø5/32", the same fitting is used for them.

Tube Releasing Tools (This tool is used for removing the tube from the 4(A) and 2(B) port.)

		<u>, , , , , , , , , , , , , , , , , , , </u>
Part no.	TG-0608	TG-1012
Applicable tubing O.D.	ø6/ø8	ø10/ø12

* Tube releasing tools are not applicable for all port sizes.






For details on the tube removal procedure, refer to the JSY1000/3000/5000 Web Catalog.


JSY5000-H Series Manifold Options


Blanking plate


[With two mounting screws] Used when valve additions are expected or for maintenance

Blanking plate (Single unit)

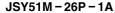

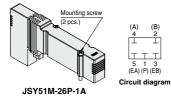

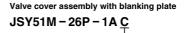

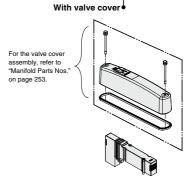

SUP/EXH blocking disk

[SUP blocking disk]

By inserting the SUP blocking disk in the pressure supply passage of the manifold valve, can provide two different high and low pressure in one manifold.

[EXH blocking disk]

By inserting the EXH blocking disk in the exhaust passage of the manifold valve, can separate the exhaust from the valve so it does not affect the other valves. It can also be used for the manifold for the positive pressure and vacuum mixed manifold. (2 pieces are required to block EA/EB both sides of the EXH.)

* When ordering a manifold, if the blocking disk is ordered at the same time in the manifold specifications, the laser printed blocking disk symbol will be displayed in the manifold block assembly that includes the blocking disk. Refer to the manifold block assembly on page 250 for the contents.




Series	SUP blocking disk	EXH blocking disk
JSY5000	JSY51M-40P-2A	JSY51M-40P-2A

JSY5000-H Series Made to Order

Please contact SMC for detailed dimensions, specifications, and delivery times.



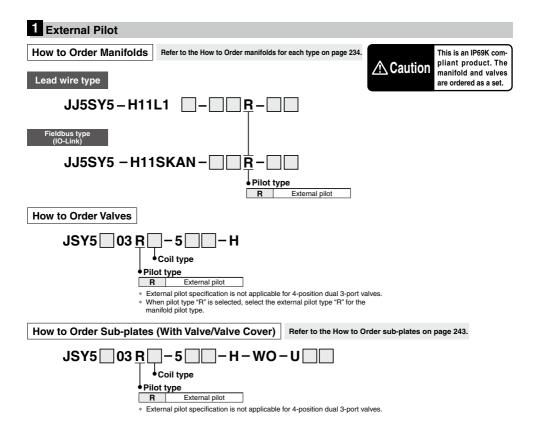



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Environment

MWarning

- 1. Do not use valves in atmospheres of corrosive gases, chemicals^{*1}, sea water, water vapor, or where there is direct contact with any of these.
 - *1 Check section on cleaning and the product component list of the external materials used, and ensure compatibility with any chemicals used in the cleaning solution.
- 2. Avoid installing and using inside a food zone.
 - · Not installable

Food zone: An environment where food which will be sold as merchandize, directly touches the manifold parts

Installable

Splash zone: An environment where food which will not be sold as merchandize, directly touches the manifold parts

Non-food zone: An environment where there is no contact with food

- ■IP69K (IEC/EN 60529/ISO 20653) compliant product
- 1. IP69K is only guaranteed to the factory condition (finished as a manifold).
- IP69K compliant products are protected against dust and high pressure hot water. However, when using the valve, keep within the ambient temperature and fluid temperature. (No freezing)
- 3. IPX9K compliant products are protected against dust and high pressure hot water jetwash.

When cleaning the manifold, it is recommended to keep the distance from the washer nozzle to the manifold at least 20 cm. Wash the manifold while moving the nozzle. Do not fix the cleaning point to one place.

4. Refer to the tightening torque in the disassembly drawing of the manifold (p. 248) when increasing or decreasing the number of stations for IP69K compliance. When installing the manifold, make sure that the gasket is not misaligned, forgotten to be attached, and that there are not foreign objects.

How to Use

≜Caution

VENT port

- 1. A VENT port is installed on the manifold so that even if a valve leaks, the leaked pressure does not accumulate inside.
- 2. Prevent liquid from entering the VENT port.
- Do not block the VENT port. If the VENT port is used with the port closed, internal pressure may build up and the product gasket may come off and IP69K is not satisfied.
- 4. Do not pressurize the VENT port. The sealing performance of the gasket will be reduced and the IP69K may not be satisfied.
- 5. Do not pipe the VENT port and the exhaust port (3/5 port) in the same piping. The back pressure of the exhaust port may be applied to the VENT port, increasing the internal pressure.



How to Use

▲Caution

Metal One-touch fittings

 When tightening the hexagon socket head male connector, use a suitable hexagon wrench, and connect the piping carefully so as not to deform or damage the inside of the connector. If the inside of the connector is deformed or damaged, the falling out of tubes may occur.



Hexagon socket


head male connector

- Uni thread fittings cannot be used. When using Uni thread fittings, the tightening load on the chamfered part of the female thread on the manifold side can cause the female thread side to deform or break.
- 3. Tighten fittings with the proper tightening torques in the table below.

Connection port	Connection thread size	Proper tightening torque [N·m]
VENT	M5	1 to 1.5
X, PE	G1/8	2.9 to 3.2
2(B), 4(A)	G1/4	5.7 to 6.3
1(P), 3(EB), 5(EA)	G1/2	14.3 to 15.8

Manual override

Use a rounded tool (such as a ballpoint hex wrench) for manual override operations. Manipulating manual override with a sharp tool will damage the manual gasket and the IP69K is not satisfied.

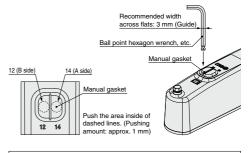

Valve/Manifold Parts Mounting

▲Caution

Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque shown below.

Thread size	Tightening torque	Tightening location
M3	0.8 N·m	Valve, Valve cover, SI unit
M4	1.4 N·m	End block
M6	4.9 N·m	Mounting leg (Option)



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Used as a 3-Port Valve

In case of using a 5-port valve as a 3-port valve

The JSY5000 series can be used as normally closed (N.C.) or normally open (N.O.) 3-port valves by closing one of the cylinder ports 4(A) or 2(B) with a plug. However, they should be used with the exhaust ports kept open. Use them when a double solenoid type 3-port valve is required.

Plug position		B port	A port
Type of actuation		N.C.	N.O.
solenoids	Single	(A)4 2(B)	(A)4 2(B)
Number of solenoids	Double	(A)4 2(B) [건도[소]] (전지 (EA)5 1 3(EB) (P)	(A)4_2(B) [건도[A]14 (EA)5_1_3(EB) (P)

Light/Surge Voltage Suppressor

▲Caution

■ Polar type Positive common Single solenoid

Negative common Single solenoid Light/surge voltage suppressor (
NZ)

COM

[SOL.a]

[SOL a


LED

(Red)

ity protection diode

Coil

Light/surge voltage suppressor (
Z)

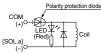




Double solenoid, 3-position, 4-position

Light/surge voltage suppressor (
Z)



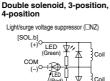


Polarity protection diod

Negative common

* Serial transmission type is not applicable for the positive common.

■ Non-polar type With light/surge voltage suppressor (□U) Single solenoid Double solenoid



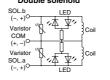



Light/Surge Voltage Suppressor

▲Caution

With power-saving circuit


Power consumption is decreased to approx. 1/4 compared with the standard product by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.)

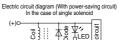

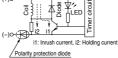

The circuit shown above reduces the power consumption for holding in order to save energy. Refer to the electrical power waveform as shown below.

<Electrical power waveform with power-saving circuit>

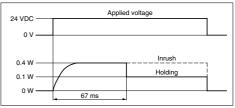

 Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)

Residual voltage of the surge voltage suppressor

If a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the table below and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the response time on page 230.

Residual Voltage

Surge voltage suppressor	24 VDC
Z	Approx. 1 V
U	Approx. 47 V

Continuous Duty

≜Caution

If a valve is energized continuously for long periods of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. If the valve is energized continuously or if the A side and B side of the dual 3-port valve are energized simultaneously, be sure to use a valve with power-saving circuit.

Energization of a 2-Position Double Solenoid Valve

Caution

To avoid operation failure, do not energize the A side and B side of 2-position double solenoid valve at the same time.





Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Countermeasure for Surge Voltage Intrusion

▲Caution

Surge voltage intrusion

With non-polar type valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and a valve in a de-energized state may switch over (see Fig. 1). When installing a breaker circuit for the loading power supply, consider using a valve with polarity (with polarity protection diode), or

install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Fig. 2).



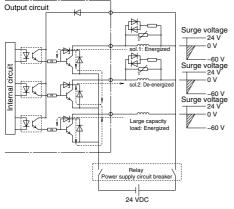


Fig. 1 Surge intrusion circuit example (NPN outlet example) (24 VDC)

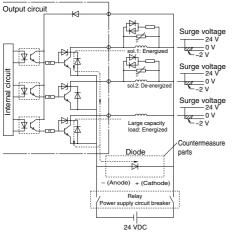


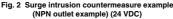

Light Indication

▲Caution

When equipped with indicator light and surge voltage suppressor, the light window turns red when solenoid a is energized, and it turns green when solenoid b is energized.

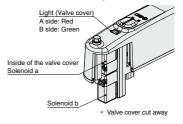

Substrate inside Manifolds

≜Caution

The substrate inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

Other Tube Brands

▲Caution

- 1. When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.
 - 1) Nylon tubing

@SMC

- Within ±0.1 mm bing Within ±0.1 mm
- Soft nylon tubing
 Polyurethane tubing
 - ng Within +0.15 mm, Within –0.2 mm

Do not use tubing which does not satisfy the specified tubing O.D. accuracy, or tubing with an I.D., material, hardness, or surface roughness that differs from SMC's tubing. Please consult SMC if anything is unclear. It may cause difficulty in connecting the tubing, leakage, disconnection of the tubing, or fitting damage.

When used with tubing other than those from SMC, due to their properties, the KQG2 and KQB2 are not subject to warranty.

2. When using fittings other than those from SMC, be certain to confirm that the operating conditions are such that no problems will arise.





Be sure to read this before handling the products. Refer to page 7 for safety instructions and pages 8 to 14 for 3/4/5 port solenoid valve precautions.

One-touch Fittings

≜Caution

Installation and removal of tubing for One-touch fittings 1) Installation of tubing

- (1) Cut the tubing perpendicularly, being careful not to damage the outside surface. Use an SMC tube cutter TK-1, 2, 3, 5, or 6. Do not cut the tubing with pliers, nippers, scissors, etc., otherwise the tubing will be deformed and problems may result. Allow some extra length in the tube.
- (2) The outside diameter of the polyurethane tubing swells when internal pressure is applied to it. Therefore, it may be impossible to re-insert the tubing into the One-touch fitting. Check the tubing outside diameter, and when the accuracy of the outside diameter is +0.07 mm or larger for ø2, +0.15 mm or larger for other sizes, re-insert it into the One-touch fitting without cutting the tubing. When the tubing is re-inserted into the One-touch fitting, confirm that the tubing goes through the release button smoothly.
- (3) Grasp the tubing, and slowly push it straight (0 to 5°) into the One-touch fitting until it comes to a stop.
- (4) Pull the tubing back gently to make sure it has a positive seal. Insufficient installation may cause air to leak or the tubing to release.

As a guide for checking if the tubing is pulled out or not, refer to the following table.

Tubing size	Tensile force of tubing [N]
ø2, ø3.2, ø1/8"	5
ø4, ø5/32", ø3/16"	8
ø6, ø1/4"	12
ø8, ø5/16"	20
ø10, ø3/8"	30
ø12, ø1/2"	35
ø16	50

2) Removal of tubing

Use the release tool when the removal of tube is difficult due to the tube size. Refer to page 256 for releasing tools.

- (1) Push the release button flange evenly and sufficiently to release the tube. Do not push in the tubing before pressing the release button.
- (2) Pull out the tubing while keeping the release button depressed. If the release button is not held down sufficiently, the tubing cannot be withdrawn.
- (3) To reuse the tubing, remove the previously lodged portion of the tubing. If the lodged portion is left on without being removed, it may result in air leakage and make the removal of the tubing difficult.

SMC

Installation

≜Caution

Even though the inlet pressure is within the operating pressure range, when the piping diameter is restricted due to size reduction of supply port 1(P), the flow will be insufficient. In this case, the valve does not switch completely and the cylinder may malfunction.

Maintenance


≜Caution

1. Regular inspection and tightening of the hexagon bolts with flange is recommended at 3 months intervals, to satisfy IP69K. (Recommended inspection interval: 3 months)

For the tightening location and tightening torque, see the exploded view of the manifold (p. 248).

Please replace the washer if it is damaged.

- 2. When disassembling by removing the hexagon bolt with flange, make sure that there is not moisture on the outer surface of the product. If the product is disassembled or assembled with moisture attached, moisture may enter the inside of the manifold and cause damage.
- Make sure that the washers are in good condition, in position and assembled when tightening the hexagon bolt with flange.

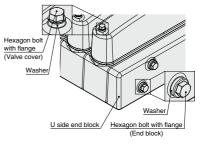



EX430 Series Specific Product Precautions 1

Be sure to read this before handling the products. Refer to page 7 for safety instructions.

Design / Selection

≜ Warning

- Do not use beyond the specification range. Using beyond the specification range may result in a fire, malfunction, or damage to the system. Check the specifications before operation.
- 2. When using for an interlock circuit:
 - Provide a multiple interlock system which is operated by another system (such as a mechanical protection function).
 - Perform an inspection to confirm that it is working properly.

Failure to do so may result in possible injuries due to malfunction.

A Caution

- Use within the specified voltage range. Using beyond the specified voltage range is likely to cause product damage or malfunction.
- 2. Do not install in places where it can be used as a foothold.

Applying any excessive load such as stepping on the product by mistake or placing a foot on it will cause it to break.

- 3. Keep the surrounding space free for maintenance. When designing a system, take into consideration the amount of free space needed to perform maintenance.
- 4. Beware of inrush currents when the power supply is turned on.

Some connected loads can apply an initial charge current which will trigger the over current protection function, causing the product to malfunction.

Mounting

A Caution

- 1. When handling and assembling products:
 - Do not apply excessive force to the product when disassembling.

The connecting parts of the product are firmly joined with seals.

- When joining units, take care not to get your fingers caught between the products. Injury may result.
- 2. Do not drop, bump, or apply excessive impact to the product.

Doing so may result in damage, equipment failure, or malfunction. Mounting

A Caution

3. Observe the tightening torque range.

Tightening outside of the allowable torque range will likely damage the screw.

IP69K cannot be guaranteed if the screws are not tightened to the specified torque.

When lifting a large solenoid valve manifold, take care to avoid causing stress to the valve connection joint.

The connection parts of the product may be damaged. Because the product may be heavy, carrying and installation should be performed by more than one operator to avoid strain or injury.

5. When installing the product, mount it on a flat surface.

Torsion in the whole product may lead to problems such as air leakage or contact failure.

Wiring

A Caution

1. Avoid repeatedly bending or stretching the cable and applying heavy objects or force to it.

Wiring where repeated bending and tensile stress are applied to the cable may result in circuit breakage.

2. Avoid miswiring.

If miswired, there is a danger of malfunction or damage to the product.

3. Do not wire while energizing the product.

There is a danger of malfunction or damage to the product or input/output device.

4. Avoid wiring the power line and high-voltage line in parallel.

Signal line noise or surge from the power line or high-pressure line could cause a malfunction.

Wiring of the product or input/output device and the power line or high-voltage line should be separated from each other.

5. Check the wiring insulation.

Defective insulation (contact with other circuits, improper insulation between terminals, etc.) may cause damage to the product or input/output device due to excessive voltage or current.



EX430 Series Specific Product Precautions 2

Be sure to read this before handling the products. Refer to page 7 for safety instructions.

Wiring

A Caution

6. When the product is installed in machinery/equipment, provide adequate protection against noise by using noise filters, etc.

Noise in signal lines may cause a malfunction.

- When connecting wires, prevent the entry of water, solvent, or oil from the connector section.
 Failure to do so may result in damage, equipment failure, or malfunction.
- 8. Avoid wiring patterns in which excessive stress is applied to the connector.

Failure to do so may result in equipment failure or malfunction due to contact failure.

Operating Environment

MWarning

1. Do not use in atmospheres containing inflammable or explosive gases.

Use in such atmospheres is likely to cause a fire or explosion. This product is not explosion proof.

A Caution

1. Provide adequate protection when operating in locations such as the following.

Failure to do so may cause a malfunction or equipment failure. The effect of countermeasures should be checked in individual equipment and machines.

- 1) Where noise is generated by static electricity, etc.
- 2) Where there is a strong electric field
- 3) Where there is a danger of exposure to radiation

4) When in close proximity to power lines or high-voltage lines

Do not use in environments where oil and chemicals are used.

Operating in environments where coolants, cleaning solvents, various oils, or chemicals are present may cause adverse effects (damage, malfunction, etc.) to the product even within a short period of time.

 Do not use in environments where the product could be exposed to corrosive gases or liquids.
 Use in such environments may cause product damage or malfunction. Operating Environment

\land Caution

Select the proper type of enclosure according to the operating environment.

IP69K is achieved when the following conditions are met.

- 1) Provide appropriate wiring using communication cables with M12 connectors.
- 2) Appropriately mount the SI unit and the manifold valve.
- 5. Do not use in locations with sources of surge generation.

Installation of the product in an area around equipment (electromagnetic lifters, high-frequency induction furnaces, welding machines, motors, etc.) which generates large surge vollages could cause an internal circuitry element of the product to deteriorate or result in damage. Implement countermeasures against the surge from the generating source, and avoid contact between the lines.

6. When directly driving a load which generates a surge voltage by relay, solenoid valve, or lamp, use a load that has an integrated surge-absorption element.

When a surge generating load is directly driven, the product may be damaged.

- The product is CE/UKCA marked but not immune to lightning strikes. Take measures against lightning strikes in your system.
- Keep dust, wire scraps, and other foreign matter from entering the product. Such materials may cause equipment failure or malfunction.
- 9. Mount the product in a location, which is not af-

fected by vibration or shock. Failure to do so may cause equipment failure or malfunction.

- 10. Do not use in direct sunlight.
 - This may cause equipment failure or malfunction.
- 11. Use within the ambient temperature range. Failure to do so may cause a malfunction.
- 12. Do not use in places where radiated heat may affect the product.

Such places are likely to cause a malfunction.



EX430 Series Specific Product Precautions 3

Be sure to read this before handling the products. Refer to page 7 for safety instructions.

Adjustment / Operation

≜ Warning

1. Do not perform operation or setting with wet hands. There is a risk of electrical shock.

A Caution

1. Use a watchmaker's screwdriver with a thin blade for the setting switch.

When setting the switch, do not touch any unrelated parts. This may cause parts damage or malfunction due to a short circuit.

2. Perform appropriate setting for the operating conditions.

Failure to do so could result in malfunction.

Refer to the Operation Manual for details on setting each switch.

3. For details on programming and address setting, refer to the manual from the PLC manufacturer.

The programming content related to the protocol is designed by the manufacturer of the PLC used. Maintenance

A Warning

1. Do not disassemble, modify (including circuit board replacement), or repair this product.

Such actions are likely to cause injuries or equipment failure.

- 2. When an inspection is performed:
 - · Turn off the power supply.
 - Stop the air supply, exhaust the residual pressure in the piping, and confirm that the air has been released before performing maintenance work.

Failure to do so may result in the unexpected malfunction of system components or injury.

\land Caution

- 1. When removing from/attaching to the valve manifold:
 - Do not apply excessive force to the unit. The connecting parts are firmly joined with seals.
 - Take care not to get your fingers caught. Injury may result.
- 2. Perform periodic inspection.

Unexpected malfunction in the system composition devices is likely to occur due to malfunction of machinery or equipment.

3. After maintenance, make sure to perform an appropriate functionality inspection.

When abnormalities such as faulty operation occur, stop operation immediately. Unexpected malfunction in the system composition devices is likely to occur.

4. Do not use benzine or thinner for cleaning the product.

Damage to the surface or erasure of the display may result. Wipe off any stains with a soft cloth.

If the stain is persistent, soak a cloth in a dilute solution of neutral detergent, wring it out sufficiently, wipe the product, and then finish with a dry cloth.

Other

▲ Caution

1. Refer to the catalog of each series for Common Precautions and Specific Product Precautions for valve manifolds.